


Brookstone®

Flip Calculator

WITH WORLD CLOCK,
CALENDAR AND ALARM

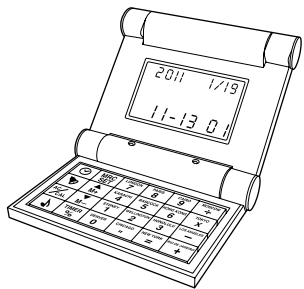


BATTERY PRECAUTIONS

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

SAVE THESE INSTRUCTIONS!

LOCATION OF CONTROLS

1. Flip Button
2. Reset Button
3. Speaker
4. Battery Compartment
5. Stand
6. LCD Screen
7. Keypad

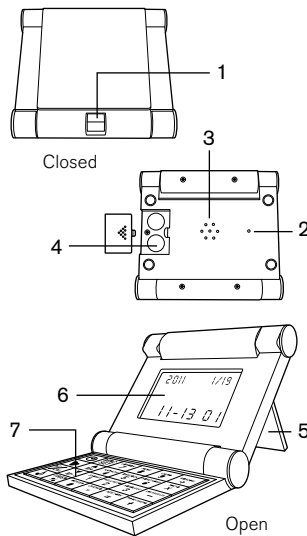

BATTERY INSTALLATION

Important: This unit comes with the batteries already installed. Remove the plastic tab from the battery compartment before first use.

1. Remove the BATTERY COMPARTMENT COVER on the bottom of the unit.
2. Remove spent batteries and replace them with 2 AG13 button cell batteries according to the polarity indicators inside the compartment.
3. Replace the BATTERY COMPARTMENT COVER securely.

TO SET THE CLOCK

1. Press the key to enter the TIME MODE.
2. Press the button that shows a city that has the same time zone as your current location.
3. Press SET 2 times to set your local time. The setting sequence is as follows: Second, Hour, Minute, Year, Month, Date. Press SET to cycle through each one.
4. The section to be set will flash. Press the UP or DOWN key to adjust the number.
5. Press = key in TIME SET mode to select 12 or 24 hour mode.

WORLD TIME SET

1. In the TIME MODE press one of the 16 city keys to search other time zone's current times.
2. Press the SET key to set this city's time to be the local time.
3. Press key to go back to the local time.

ALARM SET

1. Press key to enter ALARM MODE.
2. Press key again to toggle alarm on/off, indicated by the icon.
3. Press SET to set the alarm time, the setting sequence is as follows: Hour, Minute, Normal.
4. The number to be set will flash. Press the UP or DOWN key to adjust the number.
5. Press number keys 1 – 6 to choose an alarm song or 7 and 8 for beeping tones.

Find thousands more
great ideas online

Brookstone

COUNT DOWN TIME SET

1. Press the TIMER key to enter COUNT DOWN TIMER mode.
2. Press the SET key to set the count down number. The seconds will flash 00. The setting sequence is as follows: Second - Hour - Minute.
3. Press the UP or DOWN key to set seconds from 01 to 59.
4. Press SET and the hour will flash.
5. Press the UP or DOWN key to set hour from 01 to 99.
6. Press SET and the minutes will flash.
7. Press the UP or DOWN key to set minutes 01 to 59.

USING THE TIMER

To begin the count down, press the TIMER button.


To pause the countdown, press the TIMER button when the time is counting down. To begin the count down again, press the counter button again.

When the timer reaches 0 it will play a song. Press any button to shut off.

To reset the counter to (00-00 00), press the TIMER button to pause the count down, and press either the UP or DOWN button.

741524

KEYTONE

Press  key at any mode to toggle the key tone beep on and off.

SPECIFICATIONS

2 AG13 Button Cell Batteries

TROUBLESHOOTING

Problem: The buttons are malfunctioning and the LCD is showing strange graphics.

Solution: When new batteries are installed, it is possible that the buttons may not work correctly and the display may show irregular graphics. If this happens, press the reset button on the bottom of the unit by using a thin, pointed object to push the reset button.

ONE (1) YEAR LIMITED WARRANTY

Brookstone® warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, Brookstone will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or 3) provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Brookstone, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Brookstone's property. When a store credit is given, the original product must be returned to Brookstone and becomes Brookstone's property.

Obtaining Service: To obtain warranty service, call Brookstone Limited Warranty Service at 1-800-292-9819. Please be prepared to describe the product that needs service and the nature of the problem. A purchase receipt is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary. You are responsible for delivery and the cost of delivery of the product or any parts to the authorized service center for replacement, per our instructions.

Limits and Exclusions: Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia and the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands. This Limited Warranty applies only to products manufactured for Brookstone that can be identified by the "Brookstone" trademark, trade name, or logo affixed to them or their packaging. The Limited Warranty does not apply to any non-Brookstone products. Manufacturers or suppliers other than

Brookstone may provide their own warranties to the purchaser, but Brookstone, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Brookstone; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

BROOKSTONE SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, BROOKSTONE DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF BROOKSTONE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY.

Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.