

# FM2200 User Manual

## V1.9

## Contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>INTRODUCTION.....</b>  | <b>4</b>  |
| 1.1      | ATTENTION .....   | 4         |
| 1.2      | INSTRUCTIONS OF SAFETY .....  | 4         |
| 1.3      | LEGAL NOTICE .....  | 5         |
| 1.4      | ABOUT DOCUMENT.....   | 5         |
| <b>2</b> | <b>BASIC DESCRIPTION.....</b>   | <b>6</b>  |
| 2.1      | PACKAGE CONTENTS.....   | 6         |
| 2.2      | BASIC CHARACTERISTICS .....   | 6         |
| 2.3      | MECHANICAL FEATURES.....  | 7         |
| 2.4      | SIM CARD INSERT SCHEME.....   | 9         |
| 2.5      | INSTALLING FM2200 DRIVERS.....  | 9         |
| 2.6      | NAVIGATE LED .....  | 11        |
| 2.7      | MODEM LED.....  | 11        |
| 2.8      | STATUS LED .....  | 11        |
| 2.9      | SOCKET 1×6.....   | 12        |
| 2.10     | USB .....   | 12        |
| 2.11     | ACCESSORIES .....   | 13        |
| <b>3</b> | <b>FIRMWARE .....</b>   | <b>15</b> |
| <b>4</b> | <b>OPERATIONAL BASICS .....</b>   | <b>16</b> |
| 4.1      | OPERATIONAL PRINCIPALS.....   | 16        |
| 4.2      | SLEEP MODE.....   | 17        |
| 4.3      | VIRTUAL ODOMETER.....   | 17        |
| <b>5</b> | <b>CONFIGURATION.....</b>   | <b>18</b> |
| 5.1      | CONFIGURATOR .....  | 18        |
| 5.2      | SYSTEM SETTINGS.....  | 19        |
| 5.3      | GPS SETTINGS .....  | 19        |
| 5.4      | GEOFENCE SETTINGS.....  | 20        |
| 5.5      | GSM SETTINGS .....  | 21        |
| 5.6      | GPRS SETTINGS.....  | 22        |
| 5.7      | SMS SETTINGS.....   | 22        |
| 5.8      | SEND PARAMETER SETTINGS .....   | 23        |
| 5.9      | I/O SETTINGS .....  | 24        |
|          | <i>Note: I/O element's "Movement sensor", Averaging constant is interpreted as Start Move Timeout in seconds (from 1 to 59).....</i>      | <i>25</i> |
|          | <i>Start Move Timeout – is a time interval required for movement sensor to be in the moving state, to consider vehicle as moving.....</i> | <i>25</i> |
| 5.9.1    | Monitoring.....   | 26        |
| 5.9.2    | Event Generating.....   | 26        |
| 5.9.3    | Hysteresis.....   | 26        |
| <b>6</b> | <b>SMS COMMAND LIST.....</b>  | <b>28</b> |
| 6.1      | SMS SETTINGS FOR FM2200 .....   | 28        |
| 6.2      | SMS COMMAND LIST .....  | 28        |
|          | <i>getstatus.....</i>   | <i>29</i> |
|          | <i>getweektime.....</i>   | <i>30</i> |
|          | <i>getops.....</i>  | <i>30</i> |
|          | <i>getcfptime.....</i>  | <i>30</i> |
|          | <i>getgps .....</i>   | <i>30</i> |
|          | <i>getver.....</i>  | <i>30</i> |
|          | <i>getinfo.....</i>   | <i>31</i> |
|          | <i>getio.....</i>   | <i>31</i> |
|          | <i>radio # .....</i>  | <i>31</i> |
|          | <i>setdigout ## .....</i>   | <i>31</i> |
|          | <i>getparam ##### .....</i>   | <i>31</i> |
|          | <i>setparam ##### # .....</i>   | <i>32</i> |
|          | <i>flush #,#,#,#,#,#,## .....</i>   | <i>32</i> |

|           |   |           |
|-----------|---|-----------|
| <b>7</b>  | <b>DEBUG MODE.....</b>  | <b>33</b> |
| <b>8</b>  | <b>PARAMETER LIST .....</b>                                   | <b>34</b> |
| 8.1       | GLOBAL PARAMETERS.....  | 34        |
|           | <i>Record search (ID=105).....</i>                            | 34        |
|           | <i>Link timeout (ID=107).....</i>                             | 34        |
| 8.2       | DATA ACQUISITION AND SENDING PARAMETERS.....                  | 34        |
|           | <i>Time based acquire interval (ID=011).....</i>              | 34        |
|           | <i>Distance based acquire interval (ID=012).....</i>          | 34        |
|           | <i>Angle based coordinate acquisition (ID=013).....</i>       | 34        |
|           | <i>Data Send interval (ID=270).....</i>                       | 35        |
|           | <i>Minimum records number in packet (ID=232).....</i>         | 35        |
|           | <i>GPRS Enable (ID=240).....</i>                              | 35        |
|           | <i>GSM Operator list (ID=271).....</i>                        | 35        |
|           | <i>GPRS Data send week time schedule (ID=272).....</i>        | 36        |
|           | <i>SMS Data send week time schedule (ID=273).....</i>         | 36        |
|           | <i>SMS Data send allow (ID=250).....</i>                      | 36        |
|           | <i>24 Records time step (ID=274).....</i>                     | 36        |
| 8.3       | SECURITY SETTINGS AND PARAMETERS .....                        | 37        |
|           | <i>SMS User login (ID=252).....</i>                           | 37        |
|           | <i>SMS User password (ID=253).....</i>                        | 37        |
|           | <i>Server Number (ID=260).....</i>                            | 37        |
|           | <i>Authorized Number #1 (ID=261).....</i>                     | 37        |
| 8.4       | GPRS ACCESS AND ADDRESS SETTINGS .....                        | 38        |
|           | <i>APN Name (ID=242).....</i>                                 | 38        |
|           | <i>APN username (ID=243).....</i>                             | 38        |
|           | <i>APN Password (ID=244).....</i>                             | 38        |
|           | <i>Data send protocol (ID=231).....</i>                       | 38        |
|           | <i>Server IP address (ID=245).....</i>                        | 38        |
|           | <i>Server port number (ID=246).....</i>                       | 38        |
| 8.5       | GEOFENCE ZONES SETTINGS AND PARAMETERS.....                   | 39        |
|           | <i>GeoFence border width (ID=020).....</i>                    | 39        |
|           | <i>GeoFence Zone #1 Configuration Parameter (ID=030).....</i> | 39        |
|           | <i>GeoFence x1 (ID=031).....</i>                              | 39        |
|           | <i>GeoFence y1 (ID=032).....</i>                              | 39        |
|           | <i>GeoFence x2 (ID=033).....</i>                              | 40        |
|           | <i>GeoFence y2 (ID=034).....</i>                              | 40        |
|           | <i>All the rest zones.....</i>                                | 40        |
| 8.6       | SYSTEM PARAMETERS .....                                       | 40        |
|           | <i>Sleep mode (ID=000).....</i>                               | 40        |
|           | <i>GPS Enable (ID=010).....</i>                               | 40        |
| 8.7       | IO PROPERTIES .....   | 41        |
|           | <i>IO#1 property parameter (ID=300).....</i>                  | 41        |
|           | <i>IO#1 priority (ID=301).....</i>                            | 41        |
|           | <i>IO#1 High level (ID=302).....</i>                          | 41        |
|           | <i>IO#1 Low level (ID=303).....</i>                           | 41        |
|           | <i>IO#1 logic operand (ID=304).....</i>                       | 42        |
|           | <i>IO#1 averaging length (ID=305).....</i>                    | 42        |
| <b>9</b>  | <b>MOUNTING RECOMMENDATIONS.....</b>                          | <b>43</b> |
| 9.1       | CONNECTING WIRES.....   | 43        |
| 9.2       | CONNECTING POWER SOURCE.....                                  | 43        |
| 9.3       | CONNECTING IGNITION WIRE.....                                 | 43        |
| 9.4       | CONNECTING GROUND WIRE.....                                   | 43        |
| 9.5       | CONNECTING ANTENNAS .....                                     | 43        |
| 9.6       | MODULE INSTALLATION .....                                     | 44        |
| <b>10</b> | <b>CHANGE LOG .....</b>                                       | <b>45</b> |

# 1 INTRODUCTION

## 1.1 Attention



Do not disassemble the device. If the device is damaged, the power supply cables are not isolated or the isolation is damaged, before unplugging the power supply, do not touch the device.



All wireless data transferring devices produce interference that may affect other devices which are placed nearby.



The device must be connected only by qualified personnel.



The device must be firmly fastened in the predefined location.




The programming must be performed using a second class PC (with autonomic power supply).



The device is susceptible to water and humidity.



Warning! If wrong accumulator is used, the device may explode!

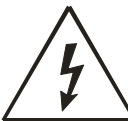

Any installation and/or handling during a lightning storm is prohibited.



FM2200 has USB interface;  
Please use cables provided with FM2200 device.  
Teltonika is not responsible for any harm caused by using wrong cables for PC <-> FM2200 connection.

## 1.2 Instructions of safety

This chapter contains information on how to operate FM2200 safely. By following these requirements and recommendations, you will avoid dangerous situations. You must read these instructions carefully and follow them strictly before operating the device!

The device uses a 10 V...30 V DC power supply. The nominal voltage is 24 V DC. The allowed range of voltage is 10 V...30 V DC, power – not more than 12 W.

To avoid mechanical damage, it is advised to transport the FM2200 device in an impact-proof package. Before usage, the device should be placed so that its LED indicators are visible, which show the status of operation the device is in.

When connecting the connection (1x6) cables to the vehicle, the appropriate jumpers of the power supply of the vehicle should be disconnected.

Before dismantling the device from the vehicle, the 1x6 connection must be disconnected.

The device is designed to be mounted in a zone of limited access, which is inaccessible for the operator. All related devices must meet the requirements of standard EN 60950-1.

The device FM2200 is not designed as a navigational device for boats.

### **1.3 Legal Notice**

Copyright © 2008 Teltonika. All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Teltonika is prohibited.

Other products and company names mentioned here may be trademarks or trade names of their respective owners.

### **1.4 About document**

This document contains information about the architecture, possibilities, mechanical characteristics, and configuration of the FM2200 device.

Acronyms and terms used in document

- PC – Personal Computer.
- GPRS – General Packet Radio Service.
- GPS – Global Positioning System.
- GSM – Global System for Mobile Communications.
- SMS – Short Message Service.
- AC/DC – Alternating Current/Direct Current.
- Record – AVL data stored in FM2200 memory. AVL data contains GPS and I/O information
- AVL packet - Data packet that is being sent to server during data transmission. AVL packet contains from 1 to 30 records.

## 2 BASIC DESCRIPTION

FM2200 is a terminal with GPS and GSM connectivity, which is able to determine the object's coordinates and transfer them via the GSM network. This device is perfectly suitable for applications, which need location acquisition of remote objects. It is important to mention that FM2200 has additional inputs and outputs, which let you control and monitor other devices on remote objects. FM2200 also has a USB port for NMEA output and configuration.

### 2.1 *Package contents*

The FM2200 device is supplied to the customer in a cardboard box containing all the equipment that is necessary for operation. The package contains:

- The FM2200 device.
- Input and output power supply cable with a 1x6 connection pins.
- GPS antenna
- USB cable

### 2.2 *Basic characteristics*

GSM / GPRS features:

- Teltonika TM1 dual band module (900/1800 MHz)
- GPRS class 10
- SMS (text, data)

GPS features:

- 50 channel receiver
- NMEA, GGA, GGL, GSA, GSV, RMC, WGS-84 protocol compatible
- -160 dBm sensitivity (earlier versions)
- Skytraq (Venus634LPx chipset), -161 dBm sensitivity (newer versions)

Hardware features:

- ARM7 TDMI processor
- 1 MB internal Flash memory
- Built-in movement sensor

Interface features:

- Power supply: 10 ÷ 30V
- USB port
- 2 digital inputs
- 2 open collector outputs
- 3 status LEDs

Special features:

- Any element event triggers (external sensor, input, speed, temperature, etc.)
- Highly configurable data acquisition and sending
- Multiple Geofence areas
- Sleep mode

- Real-time process monitoring
- Authorized number list for remote access
- Firmware update over GPRS or USB port
- Configuration update over GPRS, SMS or USB port
- TCP/IP or UDP/IP protocol support
- 15000 record storing
- CE and E-mark certified

### 2.3 Mechanical features

| Part name      | Physical specification                  | Technical details  |
|----------------|---|--|
| Navigation LED | LED                                     | Power supply 10...30 V DC<br>12 W Max<br>Energy consumption:<br>GPRS: --- 200 mA r.m.s Max.,<br>Sleep: --- 25 mA r.m.s.<br>Operation temperature:<br>-25°C ... +55°C<br>Storage temperature:<br>-40°C ... +70°C<br>Storage relative humidity 5 ... 95 % (non condensation) |
| STATUS LED     | LED                                     |  |
| MODEM LED      | LED                                     |  |
| GPS            | GPS antenna connector MCX               |  |
| Socket 1×6     | Tyco Micro MATE-N-LOK<br>3 mm 1445022-6 |  |
| USB            | Mini USB socket                         |  |

Figure 1. FM2200 view & specifications


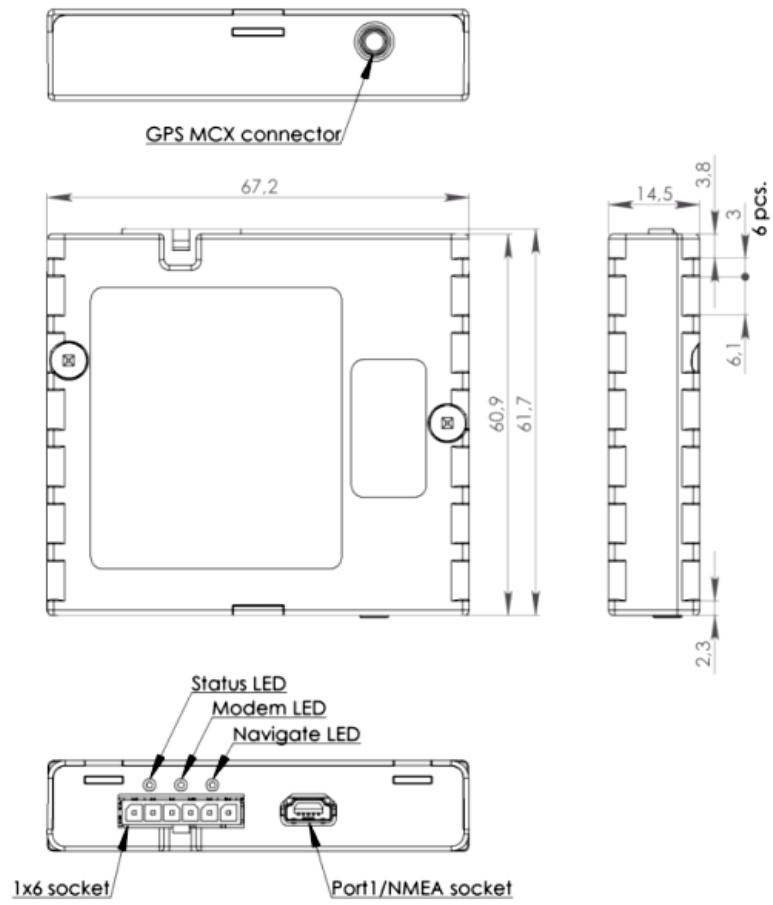


Figure 2. FM2200 view & dimensions




## CONNECTION, PINOUT, ACCESSORIES


### 2.4 SIM card insert scheme

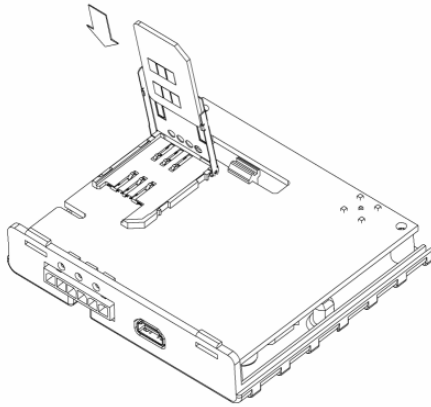


①

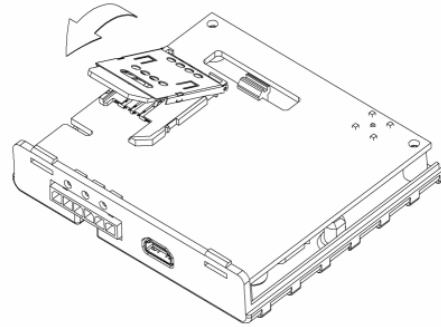

②

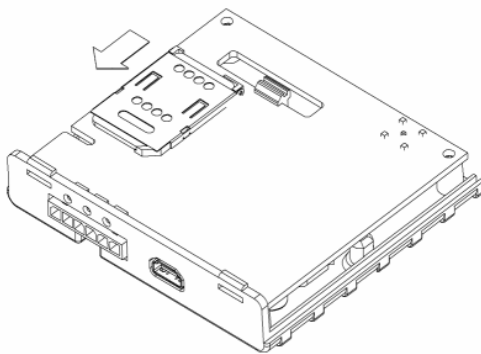

③

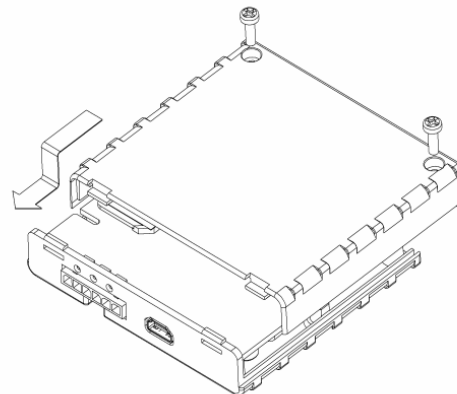

④

|   |   |
|---|---|
| ① | Open the SIM holder and insert the SIM card as shown.                   |
| ② | Close the SIM holder  |
| ③ | Push SIM holder's top part in shown direction to clip SIM holder        |
| ④ | Assemble device with enclosure's top part as shown and screw the bolts. |

### 2.5 Installing FM2200 drivers

In order to configure FM2200, “MS Windows XP Service Pack 2” or later version of MS Windows must be installed.

#### “MS Windows XP SP2”

Before connecting FM2200 to the computer, the special Hot Fixes must be installed:

- 1) Hotfix KB918365 (usbser.sys 5.1.2600.2930);
- 2) Hotfix KB935892 (usbccgp.sys 5.1.2600.3116).

After installing the HotFixes, reboot your PC.

Power up the FM2200 and connect it to the computer. “Found New Hardware Wizard” for “FM22XX Port” will appear. Choose “Install from a list or specific location” (Figure 3) and press “Next”.

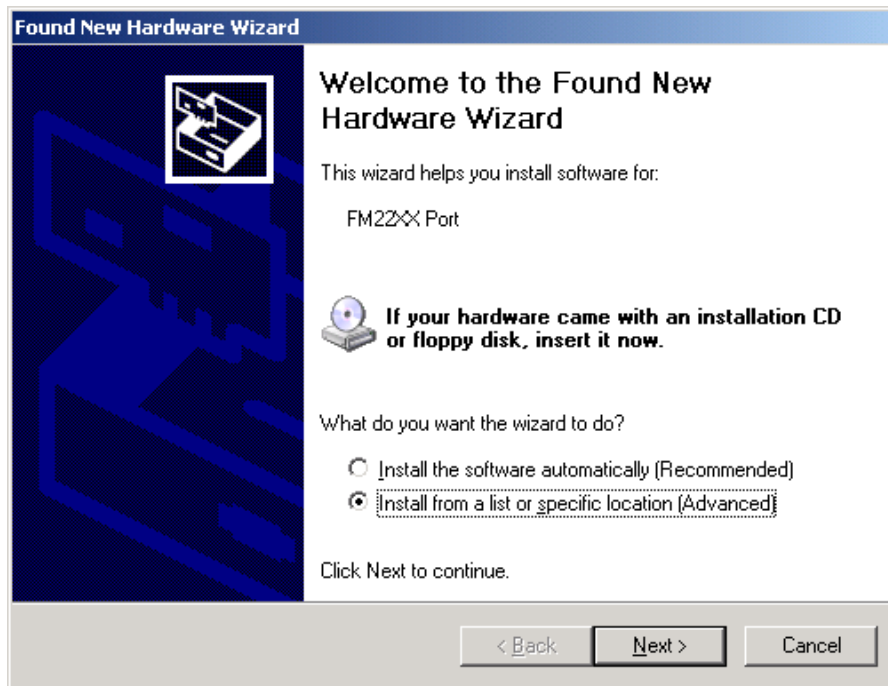


Figure 3. FM2200 installation step 1

In the new window, choose “Search for the best driver in these locations” and check the “Include this location in the search” box. Then click browse and specify the location of the “FM22XX.inf” file (contact our sales manager to get drivers). Click “Next”.

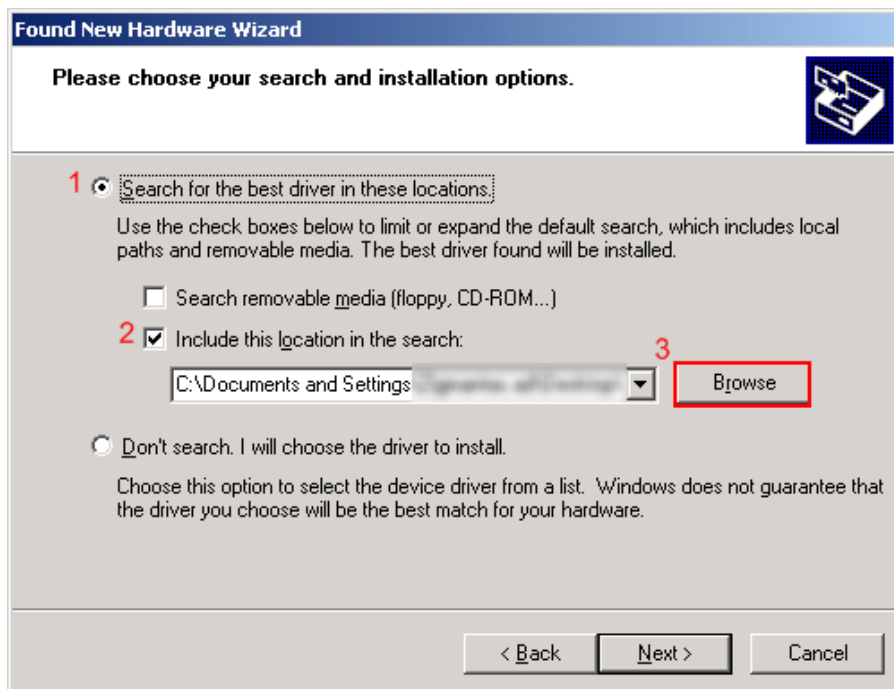


Figure 4. FM2200 installation step 2

The warning window will appear, click “Continue Anyway”.

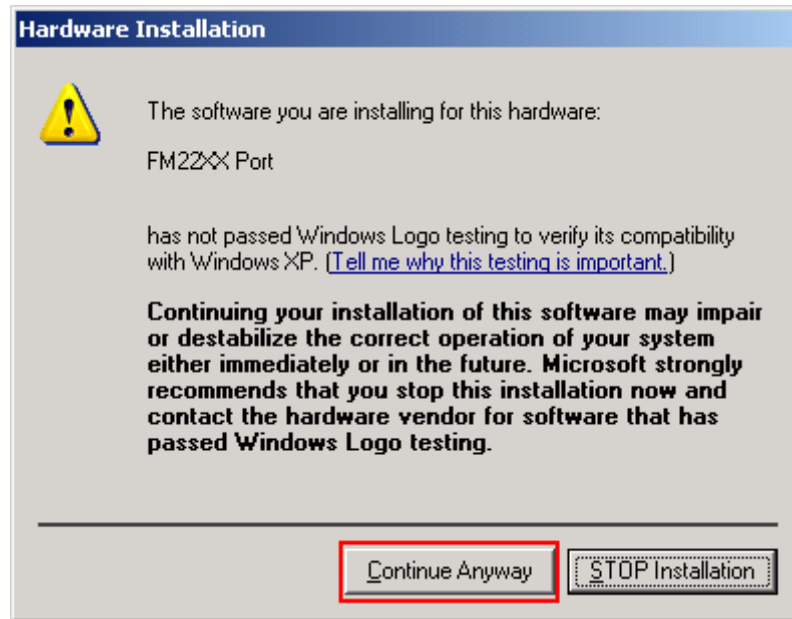


Figure 5. FM2200 installation step 3

Click “Finish”.

The installation of “FM22XX Port” is completed. Immediately after the end of the installation, the new wizard for “FM22XX GPS” will appear. Repeat all the steps as in previous installation.

### “MS Windows XP SP3” and “MS Windows Vista”

No HotFix installation is required. Proceed with the installation of “FM22XX Port” and “FM22XX GPS”.

## 2.6 *Navigate LED*

When GPS signal is not received, the Navigation LED is switched on permanently.

When GPS signal is received, the Navigation LED blinks every second:

When FM22XX is operating in Sleep mode Navigation LED is off.

If Navigation LED blinks every 11 seconds, that means GPS antenna or connector is short circuited.

**OR**

If the GPS module is **Skytraq**, it will be ON permanently.

When Navigation LED is off, that means:

- a. Short circuit occurred in GPS antenna or connector.

OR

GPS is turned OFF (SLEEP mode)

## 2.7 *Modem LED*

When power is connected to FM2200, modem led is switched on permanently.

## 2.8 *Status LED*

When device has uploaded firmware – Status LED should blink. If LED does not blink – it means that device does not function.

## 2.9 Socket 1x6

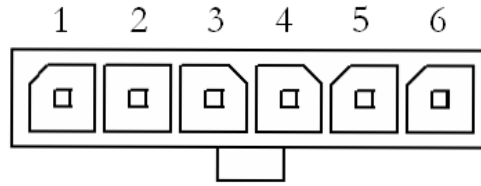


Figure 6. 1x6 socket pinout

| Pin Nr. | Pin Name                 | Description   |
|---------|--------------------------|---|
| 1       | GND(VCC(10÷30) V DC) (-) | Ground pin. (10÷30) V DC (-)  |
| 2       | VCC (10÷30) V DC (+)     | Power supply for module. Power supply range (10÷30) V DC<br>Energy consumption: GPRS: ~ 200 mA r.m.s Max. |
| 3       | DIN 1                    | Digital input, channel 1*   |
| 4       | DIN 2                    | Digital input, channel 2*   |
| 5       | OUT 2                    | Digital output. Channel 2. Open collector output.<br>Max. ~ 150mA.  |
| 6       | OUT 1                    | Digital output. Channel 1. Open collector output.<br>Max. ~ 150mA.  |

Figure 7. Socket 1x6 pinout description. \*- digital input status 0 ... ~2 V – FALSE; ~2,5 V... 30 V– TRUE

## 2.10 USB

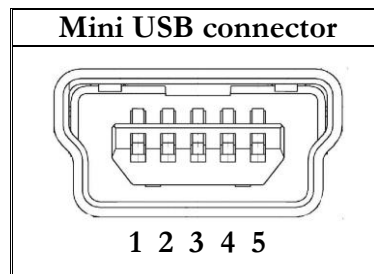


Figure 8. Mini USB connector



FM2200 has USB interface; it has Mini USB connector type.

FM2200 creates two COM-Ports: “FM22XX Port”, which can be used as system port (to flash firmware and configure the device) and “FM22XX GPS” as GPS NMEA 0183 output at 9600 baud rate.

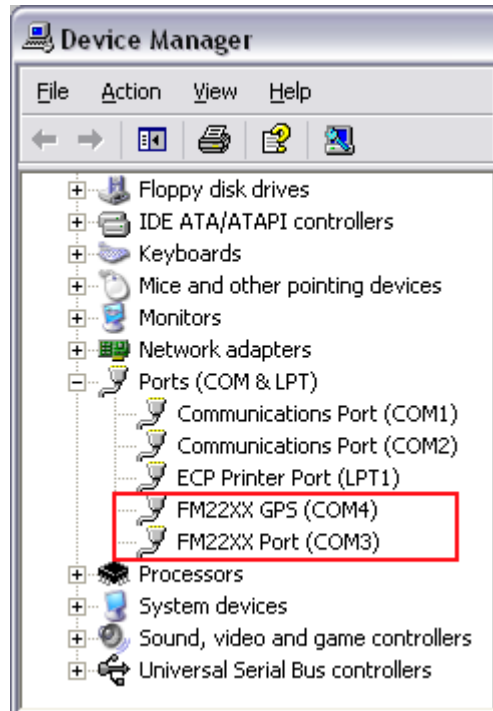


Figure 9. COM-Ports

### 2.11 Accessories



Note: Teltonika does not provide any additional equipment like panic buttons, door sensors or others.

#### Alarm buttons, door sensors, etc.

Alarm buttons, door sensors, ignition, etc. return two states: high or low voltage. Digital inputs are used to read this information. Figure below shows how to connect alarm button, door sensor, etc.

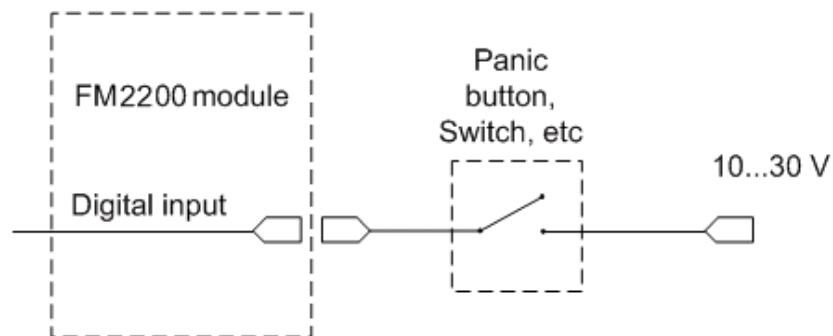


Figure 10. Panic button connection

In cases when sensor output signal is negative, an additional relay has to be installed to convert negative signal to positive.

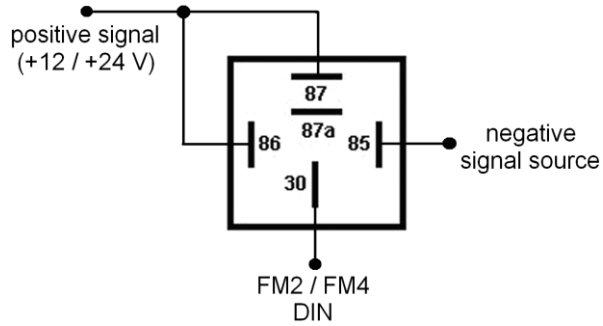


Figure 11. Inverting relay connection

### Immobilizer relay

When connected as shown below, FM2200 disables engine starter when output is ON. More details about relays can be found below.

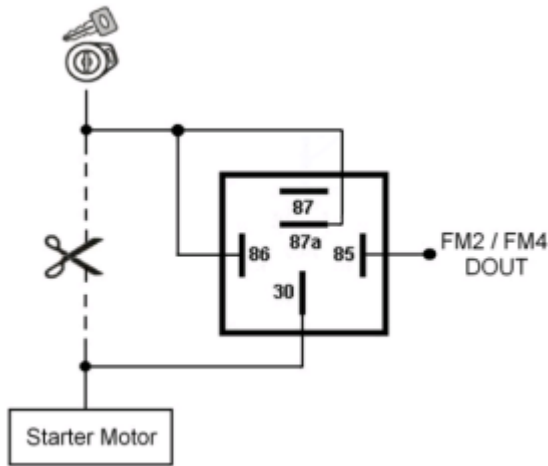


Figure 12. Immobilizer relay connection

### Relays

A simple automotive relay is used to invert input signal or to immobilize engine starter. Note, that they are available as 12 V or 24 V.

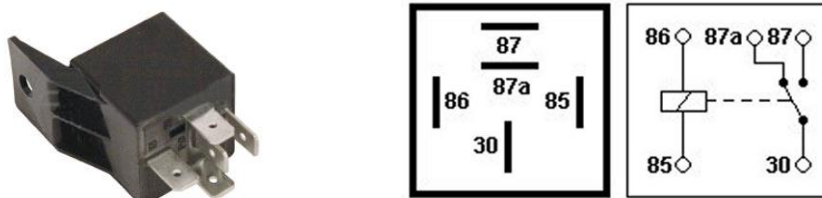


Figure 13. Automotive relay pinout

### 3 FIRMWARE

#### Updating firmware using USB cable

FM2200 is powered with smart firmware. FM2200 functionality is always improving, new firmware versions appear. Current module firmware version can be retrieved from configurator. See configuration description for details.

Contact sales manager to get the latest firmware and updater (Updater is needed to update the firmware).

Firmware must to be copied to Updater directory.

Connect FM2200 to PC with USB cable. Launch “FM Updater”, select COM port, click connect and update. Update process may take several minutes.

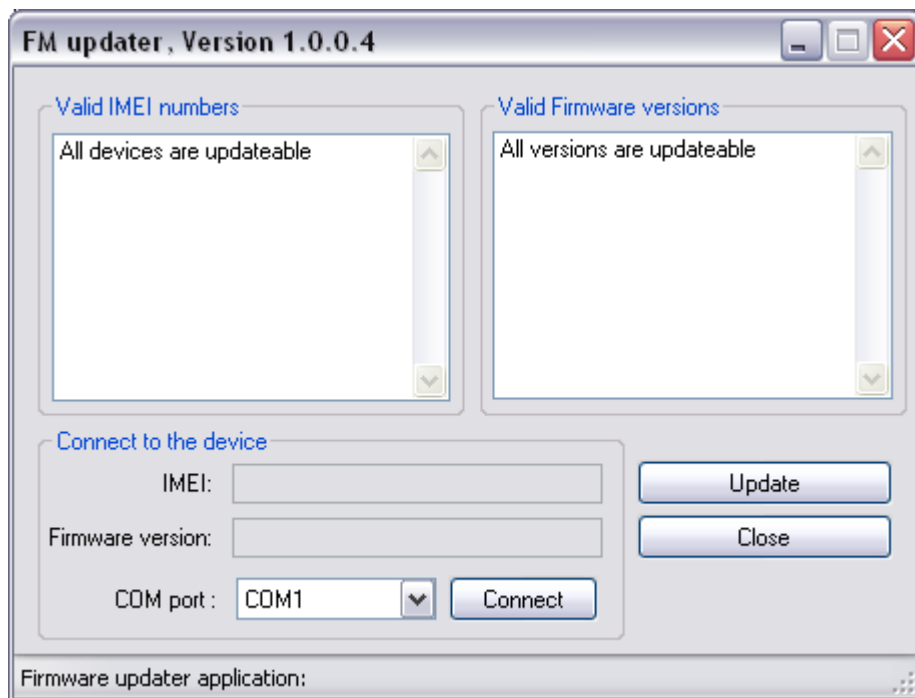


Figure 14. FM updater screen

## 4 OPERATIONAL BASICS

### 4.1 *Operational principals*

FM2200 module is designed to acquire records and send them to the server. Records contain GPS and I/O information. Module uses GPS receiver to acquire GPS data and is powered with three data acquire methods: time-based, distance-based and angle-based method. Method's details are described in GPS section. All data is stored in flash memory and later can be sent via GPRS or SMS channels. GPRS mode is most preferred data sending mode. SMS mode is mostly used in areas without GPRS coverage or GPRS usage is too expensive.

GPRS and SMS settings are described in GPRS section. FM2200 communicates with server using special data protocol. Data protocol is described in "FM4100 FM2100 and FM2200 Protocols" document.

FM2200 can be managed by SMS commands. SMS Command list is described in



SMS COMMAND LIST section. Module configuration can be performed over TCP or via SMS. Configuration parameters and modes are described in “FM4100 FM2100 and FM2200 Protocols” document.

#### **4.2 Sleep mode**

FM2200 can enter sleep mode (standby mode) under two conditions:

- FM2200 does not detect movement.
- FM2200 does not send or receive any data for 5 minutes. This means that if coordinate recording interval is less than 5 minutes, FM2200 will never go to sleep mode.

FM2200 exits sleep mode when it detects movement again.

While in sleep mode, FM2200 sets GPS receiver to sleep mode, therefore it does not record or send any data. The power usage also decreases saving vehicle's battery.

#### **4.3 Virtual odometer**

Virtual odometer is used to calculate traveled distance in FM2200 as a separate I/O element. When FM2200 detects movement, it starts counting distance using GPS signal: every second it checks current location and calculates distance between current and previous point. It keeps adding these intervals until it is time to make a record, then FM2200 records its location and adds odometer value, which is equal to the sum of all distances, measured every second. When record is made, odometer resets to zero and distance calculation starts all over again. Note, that FM2200 does not measure distance between coordinates, that it records using time, distance or angle change intervals. Instead, it uses virtual points, which are established every second, and calculates distance between them.

## 5 CONFIGURATION

### 5.1 Configurator


New FM2200 module has default factory settings. Settings should be changed according to your application and your GSM operator information.

FM2200 configuration is performed via FM2200 Configurator program. Contact our sales manager to get latest FM2200 Configurator version. FM2200 configurator operates on Microsoft Windows OS and uses MS .Net Framework 2.0 or higher. Please ensure that MS .Net Framework 2.0 or later is installed on your PC before starting configurator. Latest MS .Net Framework version can be downloaded from official Microsoft web page.

Module configuration is performed over USB cable. Configuration process starts from loading FM2200 Configurator program and selecting COM port.

FM2200 has one user editable profile stored in Flash no. 1 memory and one extra profile stored in Flash no. 0, which cannot be edited by the user. Profile from Flash no. 0 is used by system and cannot be selected as active, while profile from Flash no. 1 is fully editable and can be selected as active.

Changes of profile parameters must be saved to FM2200 Flash no. 1.

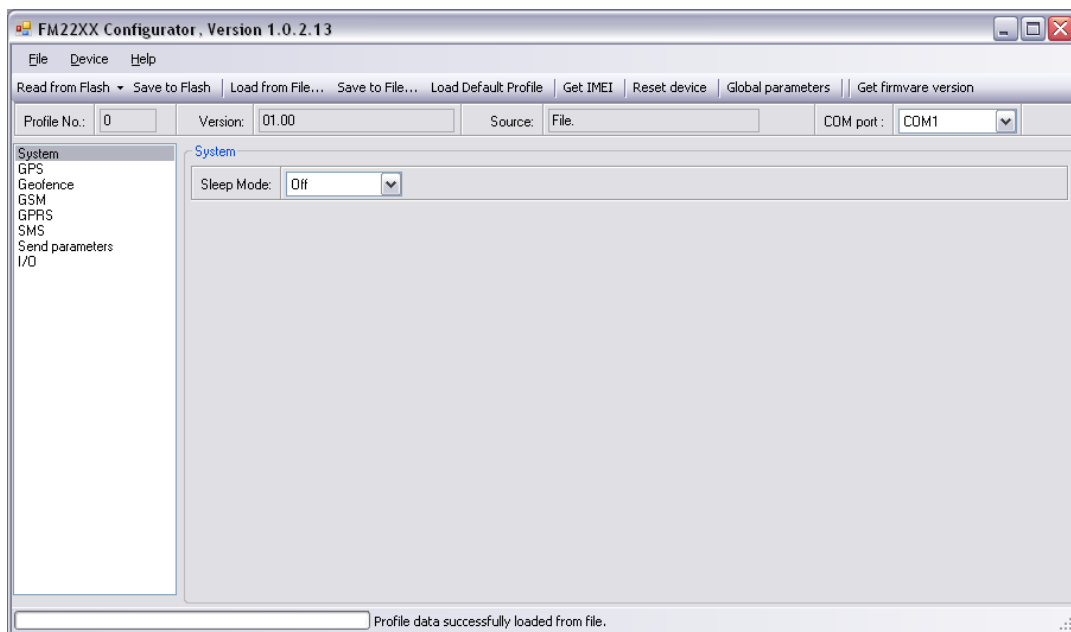

**Figure 15. Configurator window**

‘Read from Flash’ – reads configuration parameters from Flash memory.

‘Save to Flash’ – saves configuration parameters to Flash memory.

‘Load from file’ – allows user to load configuration saved in .XML extension file.

‘Save to file’ – allows user to save currently entered settings to a file.

‘Load default profile’ – loads default FM2200 settings that later can be modified. This procedure must be performed before entering new parameters.

‘Get IMEI’ – reads FM2200 IMEI number. This number is unique for every FM2200 and usually servers recognize different devices by this number.

‘Reset device’ – reboots FM2200 and displays processor firmware version.

‘Load CPU FW via PORT ½’ – updates the firmware version.

## 5.2 System settings

System settings menu has only one parameter – Sleep mode. It can be enabled or disabled by turning it on or off. See sleep mode description for more details.

## 5.3 GPS settings

GPS settings define GPS data acquiring methods and frequencies.


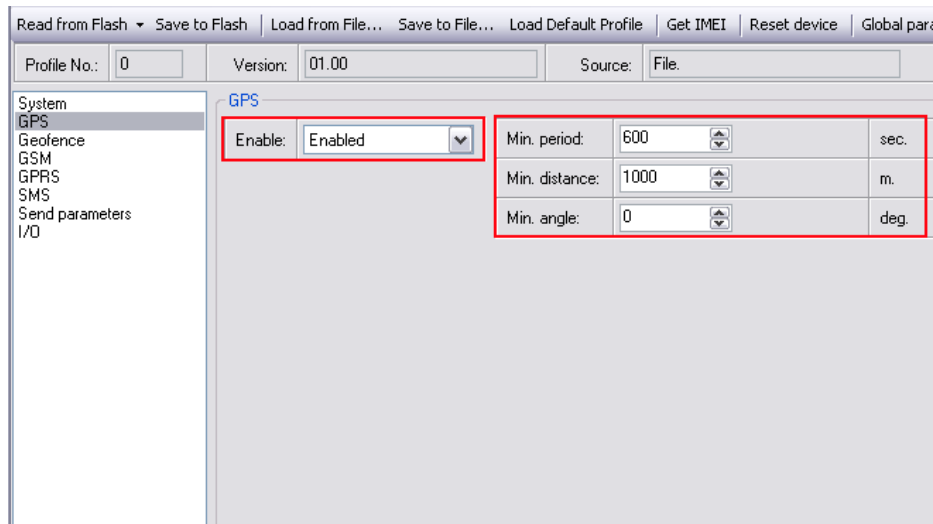


Figure 16. GPS configuration


Device is checking if the time between last saved record and current time is equal or higher than Time based acquire interval. If so, FM saves record to memory. If not, FM checks if the distance from last record to current record is equal or higher than Distance based acquire interval. If so, saves the record to memory. If not and speed is higher than 10km/h, then FM is checking if angle difference between last record and current record is equal or higher than Angle based acquire value. If so, saves the record to memory. This check is being performed every second.

FM2200 is able to collect records using three methods at the same time: time, distance and angle based data acquisition:


Time based data acquiring (Min. period) – records are being acquired every time when defined interval of time passes. Entering zero disables data acquisition depending on time.

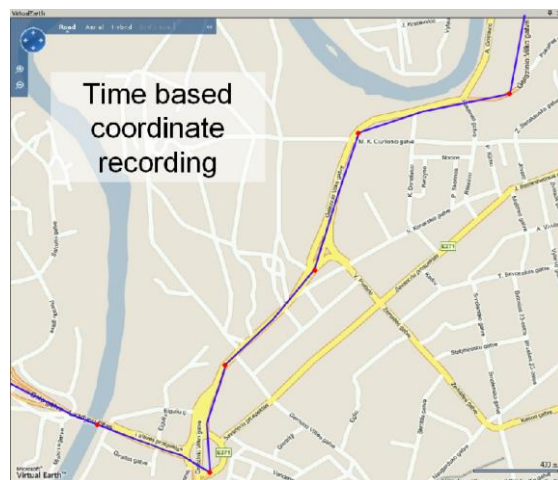

Distance based data acquiring (Min. distance) - records are being acquired when the distance between previous coordinate and current position is greater than defined parameter value. Entering zero disables data acquisition depending on distance.

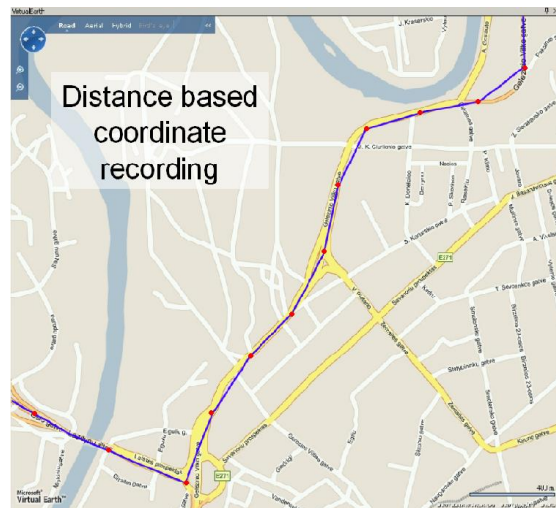

Angle based data acquiring (Min. angle) – records are being acquired when angle difference between last recorded coordinate and current position is greater than defined value. Entering zero disables data acquisition depending on angle.

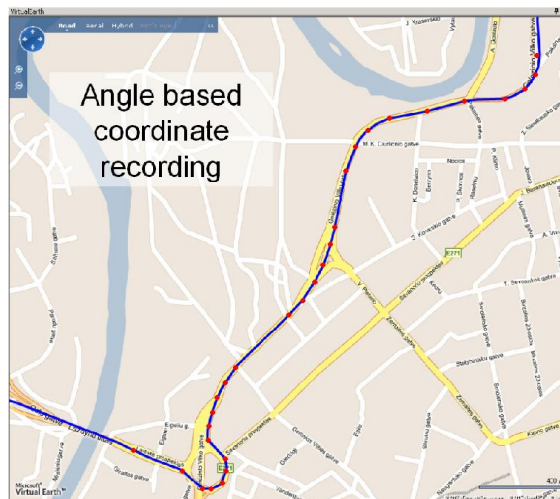

#### 5.4 Geofence settings

FM2200 has 5 configurable Geofence zones and it can generate event when defined Geofence zone border is crossed.

- Frame border – frame border is an additional border around Geofence zone. It is additional area around defined zone used to prevent false event recording when object stops on the border of the area and because of GPS errors some records are made inside area and some – outside. Event is generated only when both borders are crossed. See figure for details: track 1 is considered to enter the area while track 2 does not.

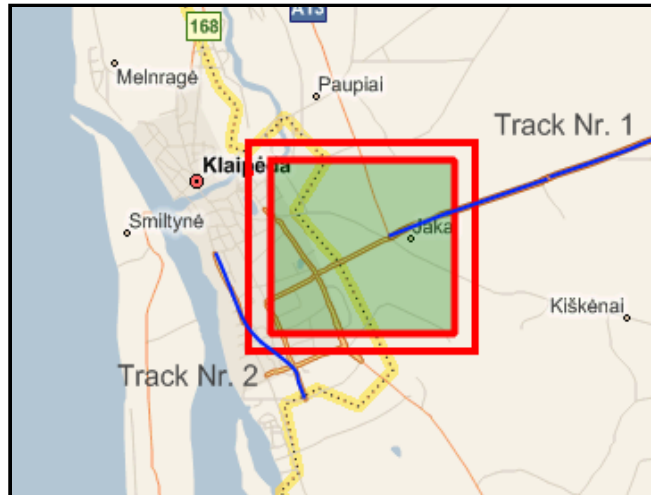


Figure 17. Geofence border

- Shape – can be either rectangular or circle
- Priority – priority of Geofence event: low, high or panic. These levels define priority of event information sending to server. See I/O element description for more details about priorities.
- Enter event – enable or disable zone entering event
- Exit event – enable or disable zone leaving event
- X1 – geofence zone left bottom corner X coordinate
- Y1 – geofence zone left bottom corner Y coordinate
- X2 or R – geofence zone upper right corner X coordinate
- Y2 – geofence zone upper right corner Y coordinate
- R - radius of circle when Circular zone used

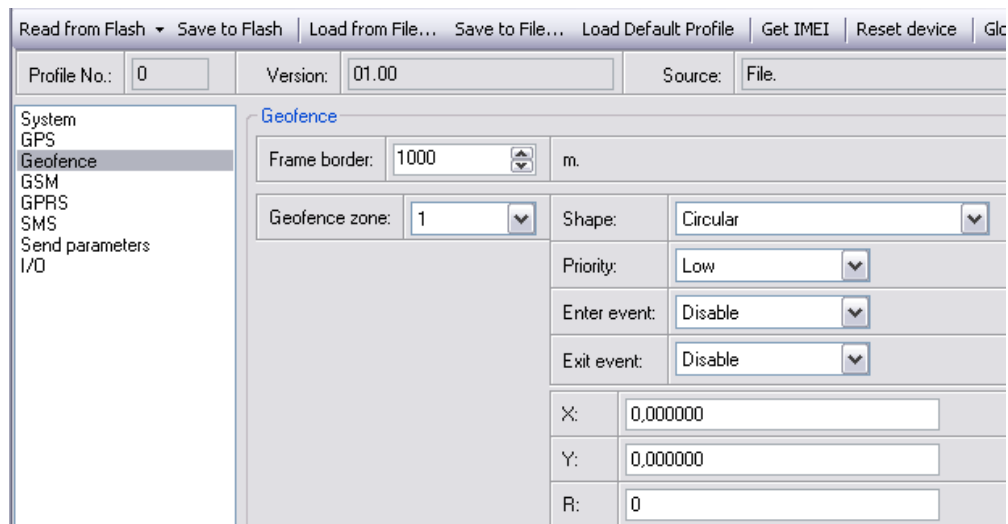


Figure 18. Geofence configuration

## 5.5 GSM settings

‘GSM Settings’ allows to set protocol used for data transfers – TCP or UDP. ‘Min Saved Records’ defines minimum number of coordinates and I/O data that should be transferred with one connection to server. If FM2200 does not have enough coordinates to send to server, it will check again after time interval defined in ‘Sending Period’ (see below).

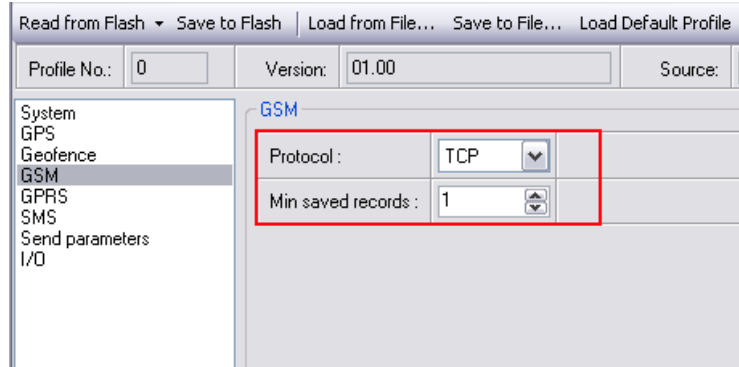


Figure 19. GSM configuration

### 5.6 GPRS settings

‘GPRS Settings’ define two main parameters for FM2200: GSM operator APN and GPRS username and password (optional – depending on operator), and destination server IP and port.

Some operators use specific authentication for GPRS session – CHAP or PAP. If any of these is used, APN should be entered as ‘<APN>:c’ or ‘<APN>:p’.

I.e. if operator is using APN ‘internet’ with CHAP authentication, it should be entered as ‘internet:c’.

Information about APN and authentication type should be provided by your GSM operator.

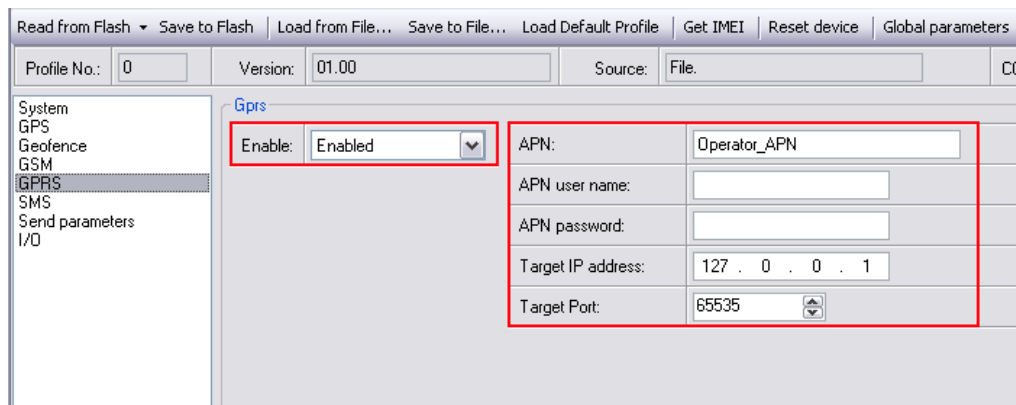


Figure 20. GPRS configuration

### 5.7 SMS settings

- SMS data send – enable or disable periodic data and event SMS use. Note, that this does not affect replies to messages – they are always sent to sender number.
- SMS send timeout – SMS send timeout (recommended 60 sec.)
- SMS Login – module login for SMS
- SMS Password – module password for SMS
- Server phone number – authorized server phone number for SMS requests, configuration, 24-coordinates and event binary SMS
- Authorized phone numbers – other authorized numbers that are allowed to control FM2200 remotely



Module login and password, server and authorised number list is used to protect FM2200 module from unauthorised access. Module accepts messages only from a list of authorised numbers and with proper module login and password. Numbers must be without “+” or “00” prefix. If no authorised numbers are entered, module accepts messages from all numbers. Server phone number automatically counts as authorised number.

Figure 21. SMS configuration

### 5.8 Send Parameter settings

Send parameters window allows to set GPRS and SMS data send periods, sending schedules, set allowed operator list.

- Send period – GPRS data sending to server period. Module makes attempts to send collected data to server every defined period. If it does not have enough records (depends on parameter Min. Saved Records described above), it tries again after defined time interval
- Time step – FM2200 is improved with 24-coordinates-in-one-SMS sending mechanism. 24-coordinates-in-one-SMS mechanism is used in areas where no GPRS coverage is available. Module collects data and sends to server binary SMS containing information about last 24 collected points with interval between them defined in time step field. SMS sending schedule is set in SMS Week Time tab. 24-Coordinates SMS decoding is described in “FM4100 FM2100 and FM2200 Protocols” document.
- GPRS Context Week Time tab – most GSM billing systems charge number of bytes (kilobytes) transmitted per session. During the session, FM2200 makes connection and transmits data to a server. FM2200 tries to handle session as much as possible. Session can last hours, days, weeks or session can be closed after every connection in certain GSM networks – this depends on GSM network provider. GPRS Context Week Time defines session re-establish schedule if session was closed by network. New GPRS context is opened if time is 10 minutes till time checked in table. Therefore if all boxes are checked, FM2200 is able to open new connection anytime. At scheduled time match FM2200 checks for GPRS session activity. If GPRS session is alive, FM2200 sends data to server according to Send period parameter. If it is not, FM2200 checks if it is able to re-establish the session.
- SMS Week Time tab – week time allows setting SMS data sending schedule. SMS mode is mostly used in areas where GPRS is not available.



Note FM2200 operates GMT time without daylight saving.

- Operators list – FM2200 is able to use GPRS with all operators, but if at least one operator is entered in the list, FM2200 is allowed to connect to GPRS only while operating in listed operator's network.

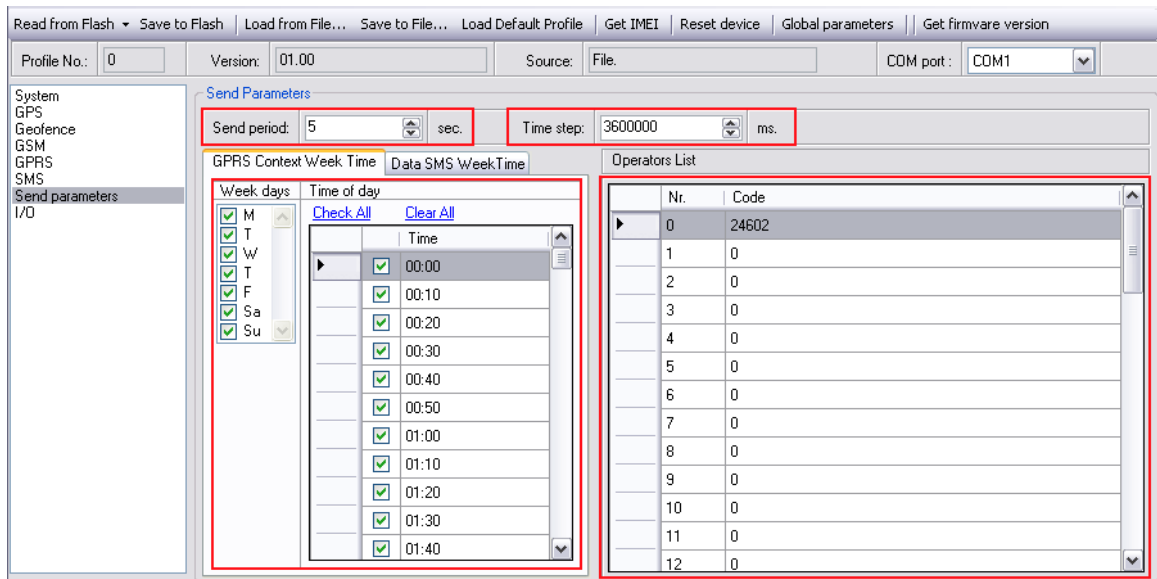


Figure 22. Send Parameters configuration

## 5.9 I/O settings

When no I/O element is enabled, AVL packet comes with GPS information only. After enabling I/O element(s) AVL packet in couple with GPS information contains current value(s) of enabled I/O element.

| Property ID | Property Name          | Bytes | Description  |
|-------------|------------------------|-------|--|
| 1           | Digital Input Status 1 | 1     | Logic: 0 / 1   |
| 2           | Digital Input Status 2 | 1     | Logic: 0 / 1   |
| 24          | Speedometer            | 2     | Value in km/h  |
| 66          | External Power Voltage | 2     | Voltage: mV  |
| 69          | GPS Power              | 1     | GPS antenna states: 0 – short circuit, 1 – connected |
| 70          | PCB Temperature        | 2     | 10 * Degrees (°C)                                    |
| 155         | Geozone 01             | 1     | Event: 0 – target left zone, 1 – target entered zone |
| 156         | Geozone 02             | 1     | Event: 0 – target left zone, 1 – target entered zone |
| 157         | Geozone 03             | 1     | Event: 0 – target left zone, 1 – target entered zone |
| 158         | Geozone 04             | 1     | Event: 0 – target left zone, 1 – target entered zone |
| 159         | Geozone 05             | 1     | Event: 0 – target left zone, 1 – target entered zone |
| 199         | Virtual Odometer       | 4     | Distance between two records: m                      |
| 240         | Movement               | 1     | 0 – not moving, 1 – moving.                          |
| 179         | Digital output 1 state | 1     | Logic: 0 / 1   |
| 180         | Digital output 2 state | 1     | Logic: 0 / 1   |
| 181         | PDOP                   | 2     | Probability * 10; 0-500                              |
| 182         | HDOP                   | 2     | Probability * 10; 0-500                              |
| 241         | Current Operator Code  | 4     | Currently used GSM Operator code                     |



There are two types of operations with I/O elements: simple monitoring and event generating. Monitoring method is used when current I/O information needed with regular GPS coordinates. Event generating method is used when additional AVL



packet is needed when current value of I/O exceeds predefined High and Low levels. I/O settings allow defining I/O event criteria.

| I/O               |                               |
|-------------------|-------------------------------|
| Property input:   | 13: (Enabled) Power voltage   |
| Enabled (default) | Priority: Low                 |
|                   | High level: 30000             |
|                   | Low level: 11000              |
|                   | Generate event: On range exit |
|                   | Averaging constant: 3000      |

Figure 23. I/O settings

- Enabled or disabled field – allows enabling I/O element so it is added to the data packet and is sent to the server. By default all I/O element are disabled and FM2200 records only GPS coordinates.
- Priority – AVL packet priority – low, high or panic. Regular packets are sent as Low priority records. When low priority event is triggered, FM2200 makes additional record with indication that the reason for that was IO element change. When High priority is selected, module makes additional record with high priority flag and sends event packet immediately to the server by GPRS. Panic priority triggers same actions as high priority, but if GPRS fails, it sends AVL packet using SMS mode if SMS is enabled in SMS settings.
- High and Low levels – define I/O value range. If I/O value enters or exits this range, FM2200 generates event. “Generate event” parameter defines when to generate event – when value enters defined range, exits it or both.
- Averaging constant – it is an I/O event delay parameter. In some applications there is no need to generate events on every I/O range enter/exit immediately. Sometimes it is necessary to wait some time interval before event generating. Averaging constant allows to set I/O event delay (averaging). If I/O value is entering or leaving predefined range, it must have same value for Averaging constant time. 1 Averaging constant value equals 20 milliseconds.




Note: I/O element’s “Movement sensor”, Averaging constant is interpreted as Start Move Timeout in seconds (from 1 to 59).

Start Move Timeout – is a time interval required for movement sensor to be in the moving state, to consider vehicle as moving.

### 5.9.1 Monitoring

I/O monitoring starts after enabling I/O element and setting up I/O parameters as it is shown below:

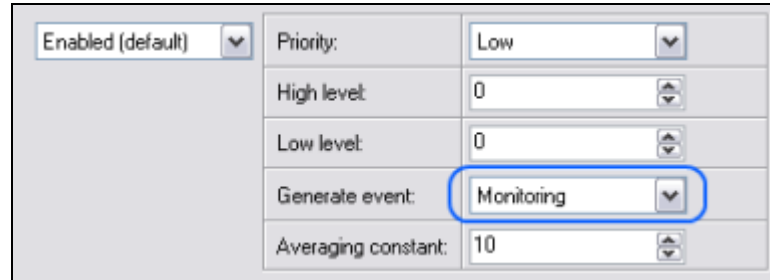


|                     |                     |              |
|---------------------|---------------------|--------------|
| Enabled (default) ▼ | Priority:           | Low ▼        |
|                     | High level:         | 0            |
|                     | Low level:          | 0            |
|                     | Generate event:     | Monitoring ▼ |
|                     | Averaging constant: | 10           |

### 5.9.2 Event Generating

Events happen when the value of enabled I/O intersects thresholds (enter, exit or on both) predefined by High and Low level thresholds. Table below defines all available values of I/O settings.

|                         |   |
|-------------------------|---|
| <b>Priority</b>         | low, high   |
| <b>High level</b>       | maximum threshold   |
| <b>Low level</b>        | minimum threshold   |
| <b>Generate event</b>   | on interval enter, on interval exit, on both enter and exit |
| <b>Average constant</b> | $1 - 2^{32}$ (4 Bytes)                                      |

### 5.9.3 Hysteresis

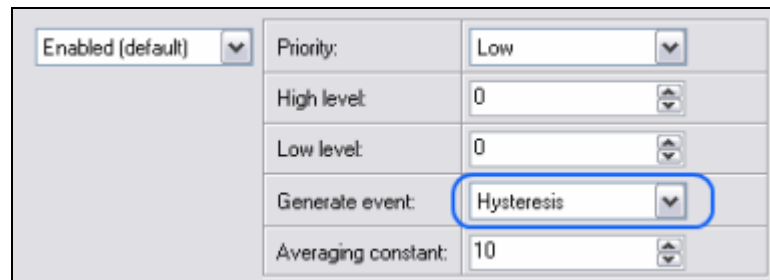

|                     |                     |              |
|---------------------|---------------------|--------------|
| Enabled (default) ▼ | Priority:           | Low ▼        |
|                     | High level:         | 0            |
|                     | Low level:          | 0            |
|                     | Generate event:     | Hysteresis ▼ |
|                     | Averaging constant: | 10           |

I/O elements can generate events according to hysteresis algorithm. If I/O event operand “Hysteresis” is selected, events will be generated as it is shown in the illustration below:

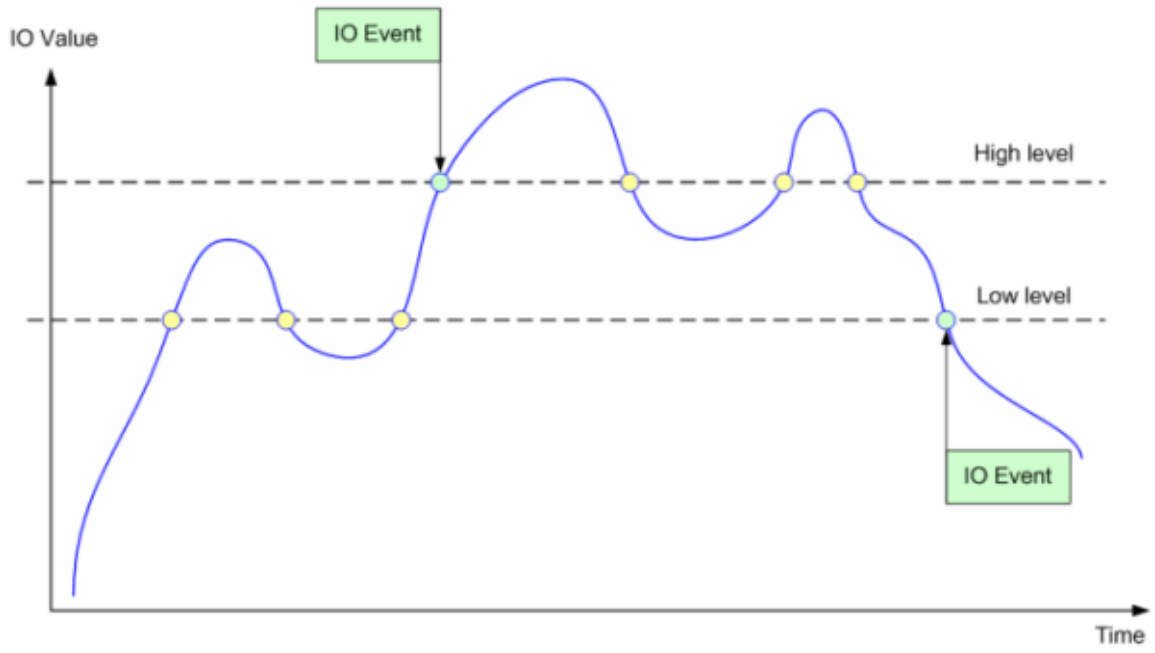


Figure 24. Event generation according hysteresis algorithm

## 6 SMS COMMAND LIST

### 6.1 SMS settings for FM2200

Figure 25. SMS login, password, server phone number and authorized phone number configuration

Essential fields in ‘SMS Settings’ are ‘Login’ and ‘Password’. This login and password should be used with every SMS sent to FM2200 as identifiers and means of protection from SMS from unauthorised numbers.

Command structure:

<login><space><password><space><command>

Example:

asd 123 getgps

### 6.2 SMS command list

| Command       | Description   | Response |
|---------------|---|----------|
| getstatus     | Modem Status information  | Yes      |
| getweektime   | Current device time, Day of Week and amount of minutes passed since start of week | Yes      |
| getops        | List of currently available GSM operator  | Yes      |
| getcfgtime    | Date and Time of last successful configuration                                    | Yes      |
| getgps        | Current GPS data and time   | Yes      |
| cpureset      | Reset CPU   | No       |
| resetprof     | Reset all FLASH1 profile to default profile                                       | No       |
| getver        | Device / Modem / Code version information   | Yes      |
| getinfo       | Device runtime system information   | Yes      |
| deleterecords | Delete all records saved on FLASH   | No       |

|                     |   |     |
|---------------------|---|-----|
| getio               | Readout digital inputs and outputs  | Yes |
| readio #            | Readout input value according entered ID, # - ID value  | Yes |
| setdigout ##        | set digital outputs<br>0 – OFF, 1 – ON<br>DOUT1 DOUT2   | Yes |
| getparam #          | Readout parameter value according entered ID.<br># - ID value.  | Yes |
| setparam # #        | Set parameter value according entered ID and Value.<br>1.# - ID value.<br>2.# - New Parameter Value   | Yes |
| flush #,#,#,#,#,#,# | Initiates all data sending to specified target server<br>1.# - IMEI<br>2.# - APN<br>3.# - LOGIN<br>4.# - PASS<br>5.# - IP<br>6.# - PORT<br>7.# - MODE (0-TCP/1-UDP) | No  |

getstatus

| Response details | Description   |
|------------------|---|
| Data Link        | Indicate module connection to server at the moment: 0 – Not connected, 1 – connected                      |
| GPRS             | Indicate if GPRS is available at the moment   |
| Phone            | Voice Call status: 0 – ready, 1 – unavailable, 2 – unknown, 3 – ringing, 4 – call in progress, 5 – asleep |
| SIM              | SIM Status: 0-ready, 1-pin, 2-puk, 3-pin2, 4-puk2   |
| OP               | Connected to GSM Operator: numerical id of operator   |
| Bat              | Battery charge level [0-5]  |
| Signal           | GSM Signal Quality [0-5]  |
| Service          |   |
| NewSMS           | Indicate if new message received  |
| Roaming          | 0 – Home Network, 1 – roaming   |
| SMSFull          | SMS storage is full? 0 – ok, 1 – SMS storage full   |

*Example: Data Link: 0 GPRS: 1 Phone: 0 SIM: 0 OP: 24602 Bat: 4 Signal: 5 Service: 1 NewSMS: 0 Roaming: 0 SMSFull: 0*

getweektime

| Response details | Description  |
|------------------|--|
| Clock Sync       | Indicates system clock synchronization status. 0 – System is not synchronized, 1 – System synchronized |
| DOW              | Day Of Week – indicates current day of week starting from 0 – Monday, 1 – Tuesday, etc.                |
| Time             | Indicates current GMT time   |
| WeekTime         | Indicates time in minutes starting from Monday 00:00 GMT   |

*Example: Clock Sync: 1 DOW: 4 Time 12:58 Weektime: 6538*

getops

| Response details | Description  |
|------------------|--|
| LIST             | Returns list of current available allowed operators. |

*Example: GSM OP LIST: 0. 24602*

getcfgtime

| Response details | Description   |
|------------------|---|
| Date/Time        | Returns last performed configuration date and time. |

*Example: Last Configuration was performed on: 2010.4.15 5:45:19*

getgps

| Response details | Description                                 |
|------------------|---|
| GPS              | Indicates valid (1) or invalid (0) GPS data |
| Sat              | Count of currently available satellites     |
| Lat              | Latitude (Last good Latitude)               |
| Long             | Longitude (Last good Longitude)             |
| Alt              | Altitude                                    |
| Speed            | Ground speed, km/h                          |
| Dir              | Ground direction, degrees                   |
| Date             | Current date                                |
| Time             | Current GMT time                            |

*Example: GPS:1 Sat:7 Lat:54.71473 Long:25.30304 Alt:147 Speed:0 Dir:77 Date: 2007/8/24 Time: 13:4:36*

getver

| Response details | Description   |
|------------------|---|
| Code Ver         | Firmware version  |
| Device IMEI      | IMEI  |
| Device ID        | Device ID is used to detect by server which type of configuration to load |
| Modem App Ver    | Version of modem application  |
| Modem REV Ver    | Modem Firmware version  |

*Example: Code Ver:0.48.17 Device IMEI:353976010139156 Device ID:000001 Modem APP Ver:2007.11.07 Modem REV Ver:04.13.00*

getinfo

| Response details | Description  |
|------------------|--|
| INI              | Device Initialization Time   |
| RTC              | RTC Time   |
| RST              | Restart Counter  |
| ERR              | Error Counter  |
| SR               | Number of Sent Records   |
| BR               | Number of broken records   |
| CF               | Profile CRC Fail counter   |
| FG               | Failed GPRS counter  |
| FL               | Failed link counter  |
| UT               | UPD Timeout counter  |
| SMS              | Sent SMS Counter   |
| NOGPS            | No GPS Timer   |
| GPS              | GPS receiver state. 0 – OFF, 1 – restarting, 2 – ON but no fix, 3 – ON and operational, 4 – sleep mode |
| SAT              | Average satellites   |
| RS               | Reset Source Identification  |

*Example: INI:2007/8/24 10:15 RTC:2007/8/24 12:43 RST:2 ERR:11 SR:182 BR:0 CF:0 FG:0 FL:0 UT:0 SMS:2 NOGPS:0:0 GPS:3 SAT:7 RS:7*

getio

| Response details | Description          |
|------------------|----------------------|
| DI#              | Digital Input state  |
| DO#              | Digital Output state |

*Example: DI1:0 DI2:0 DO1:0 DO2:0*

readio #

| Response details | Description      |
|------------------|------------------|
| ID               | IO element ID    |
| Value            | IO Element value |

*Example: IO ID:3 Value:0*

setdigout ##

Sets digital outputs to ON or OFF state. Value is written as a row for OUT1 and OUT2 values.

*Example: 'setdigout 01' will set OUT2 to high level, while OUT1 to low level.*

getparam #####

Read parameter value. ID consists of 4 digits – first digit identifies profile, second, third and fourth identifies parameter ID as described in Parameter List chapter.

| Response details | Description                     |
|------------------|---------------------------------|
| ID               | Profile number and parameter ID |
| Value            | Parameter value                 |

*Example: 'getparam 1245' command will request server IP address in profile1.*

setparam ##### #

Sets new value for parameter. ID consists of 4 digits – first digit identifies profile, second, third and fourth identifies parameter ID as described in Parameter List chapter. In value field a new parameter value is entered.

*Example: 'setparam 1245 127.0.0.1' will change configured IP address in profile1 with new value*

flush #,#,#,#,#,#,#

Initiates all data sending by GPRS to specified target server. Comma separated parameters go as numbered:

- 1.# - IMEI
- 2.# - APN
- 3.# - GPRS LOGIN
- 4.# - GPRS PASSWORD
- 5.# - IP
- 6.# - PORT
- 7.# - MODE (0-TCP/1-UDP)

Parameters are separated by comma (no spaces needed). In case you don't need to enter parameter (Login/Pass) – do not put space, simply put comma and write next parameter.

*Example: opa opa flush 353976012555151,banga,,212.47.99.62,12050,0*

| Response details           | Description   |
|----------------------------|---|
| FLUSH SMS Accepted         | FLUSH SMS Accepted  |
| # records found on FLASH   | Number of records found on FLASH  |
| Minimum Records to Send: # | Number of minimum saved records to send   |
| GPRS Enabled: #            | State of the GPRS connection, 0 – disabled;<br>1 – enabled                              |
| Time Sync: #               | Indicates time synchronization on the device,<br>0 – not synchronized; 1 – synchronized |

Example: FLUSH SMS Accepted. 11 records found on FLASH. Minimum Records to Send: 1. GPRS Enabled: 1. Time Sync: 1.



## 7 Debug mode

FM2200 is able to transmit its current state when connected to PC using USB cable. It is used to detect errors and provide information to possible solutions when operating as unexpected. Contact our sales manager to get Terminal.

After launching terminal choose baud rate 115200 and hardware control – none. Select COM port which is assigned to “FM22XX Port”. Click on ‘Start Log’ button and save a new file. Then click ‘Connect’ to start receiving messages from FM2200.

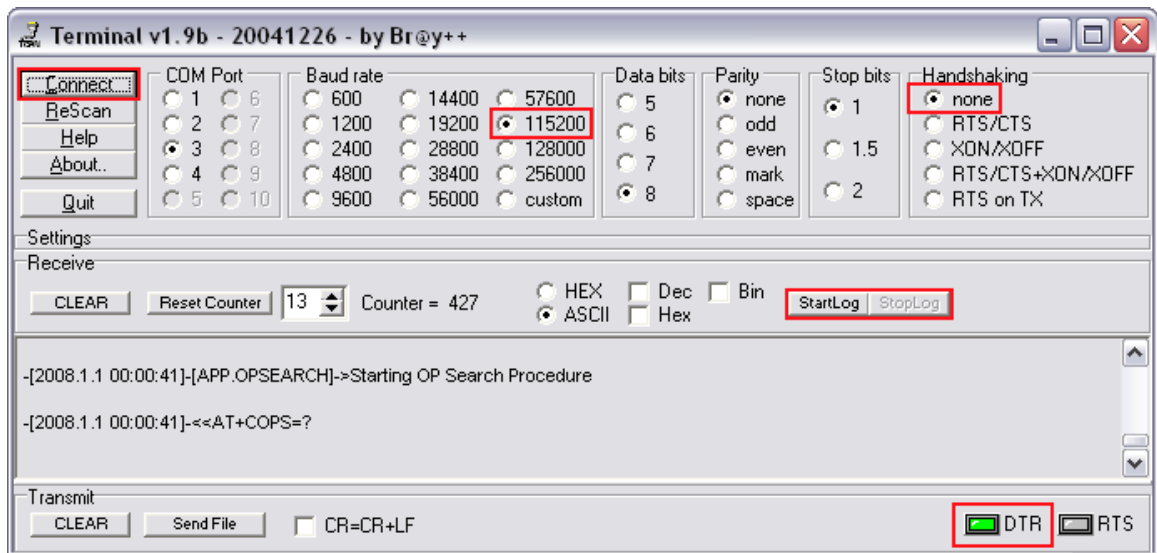


Figure 26. Terminal window

To debug NMEA GPS data, select COM port which is assigned to “FM22XX GPS”, change baud rate value to 9600 and click “Connect”.

## 8 Parameter List

FM2200 uses only one profile, therefore all changes to parameters must be done in profile1 (profile0 is for global parameters).

### 8.1 Global Parameters

Record search (ID=105)

Record search parameter is responsible for record searching order. Value of 0 arranging data starting from newest, while value of 1 arranging data starting from oldest.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|------------------------------------|------------|
| 0             | 1             | -                 | <b>Data Send interval (ID=270)</b> | S8         |

Link timeout (ID=107)

Link timeout in seconds, indicates link timeout after last record sending. Disconnection from server is not immediate after data packet is sent. Module disconnect from server after indicated timeout.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|------------------------------------|------------|
| 5             | 259200        | -                 | <b>Data Send interval (ID=270)</b> | U32        |

### 8.2 Data acquisition and sending parameters

Time based acquire interval (ID=011)

Time interval in seconds, indicating condition to acquire new record. 0 – disabled.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| 0             | 9999999       | 5                 | <b>Distance based acquire interval (ID=012)</b><br><b>Angle based coordinate acquisition (ID=013)</b> | U32        |

Distance based acquire interval (ID=012)

Distance in meters, indicating condition to acquire new record. Record is stored when the distance between previous record is greater than parameter's value. 0 – disabled

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| 0             | 65535         | 50                | <b>Time based acquire interval (ID=011)</b><br><b>Angle based coordinate acquisition (ID=013)</b> | U16        |

Angle based coordinate acquisition (ID=013)

Angle in degrees, indicating a condition to acquire new record. If angle difference between last recorded coordinate and current position is greater than defined value, new record is stored. This parameter is operational, when speed is higher then 10km/h. 0 – disabled

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|--|------------|
| 0             | 180           | 10                | <b>Time based acquire interval (ID=011)</b><br><b>Distance based acquire interval (ID=012)</b> | U32        |

#### Data Send interval (ID=270)

Time interval in seconds, indicating frequency of sending data to server. 0 – disabled.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|--|------------|
| 0             | 9999999       | 5                 | <b>GPRS Enable (ID=240)</b><br><b>GPRS Data send week time schedule (ID=272)</b><br><b>Minimum records number in packet (ID=232)</b> | U16        |

#### Minimum records number in packet (ID=232)

Minimum number of records in one data packet that can be sent to server. This parameter has higher priority than Data Send interval (ID=270).

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| 1             | 30            | 1                 | <b>Time based acquire interval (ID=011)</b><br><b>Distance based acquire interval (ID=012)</b><br><b>GPRS Data send week time schedule (ID=272)</b><br><b>Data Send interval (ID=270)</b> | U8         |

#### GPRS Enable (ID=240)

Parameter allows or does not allow using GPRS. If GPRS is not allowed value is 0, if GPRS is allowed – 1.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| 0             | 1             | 1                 | <b>Data Send interval (ID=270)</b><br><b>Minimum records number in packet (ID=232)</b><br><b>GPRS Data send week time schedule (ID=272)</b> | S8         |

#### GSM Operator list (ID=271)

Parameter defines operator list. According to this list module allows GPRS connection only while operating under listed operators. GSM operator codes are comma separated. Example: 24601, 24602, 24705...24503

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| Empty         | -             | -                 | -                                 | U32        |

### GPRS Data send week time schedule (ID=272)

This parameter manages when it is allowed to open GPRS context. When module starts it is prohibited to open the context. When modem's GPRS context is being closed (for example changing network) it is allowed to open it only at defined time. It is possible to allow connections every 10 minutes up to once per day.

Example value: 7FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF

Format is described in the next chapter.

### SMS Data send week time schedule (ID=273)

Parameter defines SMS data sending according to week time schedule. This parameter is used to set data sending on selected week days and hours. Minimum time step is 10 minutes.

Example value: 7FFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFFF

#### Schedule parameter format

Time is defined as 20 byte array. First byte of array defines week days, the following 18 bytes define timestamps with 10 minute interval and the last byte is unused. In first byte, first bit (LSB) defines if module should connect to GPRS (send SMS) on Monday, second bit – on Tuesday and so on up to seventh bit – which means Sunday. Eighth bit (MSB) is not used. If bits value is 0 then device is not allowed to open GPRS context, but if it is already open – does not close it. If value is 1 it will work as day minutes are defined in rest of the bytes.

Day's minutes are defined by 18 bytes (144 bits). Every n'th bit (beginning from the first bit (LSB) and ending 18 bytes 8'th bit (MSB)) indicates every 10'th minute of the day (day has 1440 minutes).

#### Example:

GPRS will be allowed on Monday to Friday at 8:00 and 16:00 GMT the following value should be configured:

00011111 00000000 00000000 00000000 00000000 00000000 00000000 00000000 1 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000 00000000

Red bits indicate that GPRS will be allowed everyday except Saturdays and Sundays. Blue bits indicate 480 and 720 minutes (480 min = 8 h and 720 min = 12 h). So the parameter value should be:

1F 00 00 00 00 00 00 00 01 00 00 00 00 00 01 00 00 00 00 00

It should be sent as UTF8 encoded string.

### SMS Data send allow (ID=250)

Parameter allows or does not allow using binary SMS to send Avl data. If SMS use is not allowed value is 0, and 1 if allowed.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|--|------------|
| 0             | 1             | 0                 | <b>Format is described in the next chapter.</b><br><b>SMS Data send week time schedule (ID=273)</b><br><b>SMS Data send allow (ID=250)</b> | S8         |

### 24 Records time step (ID=274)

Module is able to send binary SMS which contains 24 coordinates. Parameter ID=274 defines time step (in milliseconds) between each coordinate.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|--|------------|
| 1             | 4294967295    | 3600000           | <b>SMS Data send allow (ID=250)</b> Format is described in the next chapter.<br><b>SMS Data send week time schedule (ID=273)</b> | U32        |

### 8.3 Security settings and parameters

#### SMS User login (ID=252)

User login is used to ensure module security. Used in every SMS that is sent to device.

Example: ba321

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|--|------------|
| empty         | 5 char string | -                 | <b>SMS User password (ID=253)</b><br><b>Server Number (ID=260)</b><br><b>Authorized Number #1 (ID=261)</b> | S8[5]      |

#### SMS User password (ID=253)

User password is used to ensure module security. Used in every SMS that is sent to device.

Example: ab123

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| Empty         | 5 char string | -                 | <b>SMS User login (ID=252)</b><br><b>Server Number (ID=260)</b><br><b>Authorized Number #1 (ID=261)</b> | S8[5]      |

#### Server Number (ID=260)

Value is server GSM number. To this number the SMS with 24 coordinates is sent.

Example: 370XXXXXXXXX

| Minimum value | Maximum value  | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|----------------|-------------------|-------------------------------------|------------|
| Empty         | 16 char string | -                 | <b>SMS Data send allow (ID=250)</b> | S8[16]     |

#### Authorized Number #1 (ID=261)

Parameters ID=262 to ID=269 have values for 8 more authorized numbers. If at least one number is entered then only those number can send messages to device.

Example: 370XXXXXXXXX

| Minimum value | Maximum value  | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|----------------|-------------------|-------------------------------------|------------|
| Empty         | 16 char string | -                 | <b>SMS Data send allow (ID=250)</b> | S8[16]     |

#### 8.4 GPRS access and address settings

##### APN Name (ID=242)

Parameter defines GPRS Access Point Name.

| Minimum value | Maximum value  | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|----------------|-------------------|---|------------|
| Empty         | 32 char string | -                 | <b>GPRS Enable (ID=240)</b><br><b>APN username (ID=243)</b><br><b>APN Password (ID=244)</b> | S8[32]     |

##### APN username (ID=243)

Parameter defines APN username. In case operator does not use username for login, value should be empty.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                        | Value type |
|---------------|---------------|-------------------|--|------------|
| Empty         | 6 char string | -                 | <b>APN Name (ID=242)</b><br><b>APN Password (ID=244)</b> | S8[6]      |

##### APN Password (ID=244)

Parameter defines APN password. . In case operator does not use password for login, value should be empty.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                        | Value type |
|---------------|---------------|-------------------|--|------------|
| Empty         | 6 char string | -                 | <b>APN Name (ID=242)</b><br><b>APN username (ID=243)</b> | S8[6]      |

##### Data send protocol (ID=231)

Parameter defines GPRS data transport protocol. Module can use TCP or UDP transport protocol to send data to server. For TCP protocol value is 0, for UDP protocol value is 1.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | 0                 | <b>GPRS Enable (ID=240)</b>       | U8         |

##### Server IP address (ID=245)

Parameter defines Avl data destination server IP address. Example: 212.47.99.62

| Minimum value | Maximum value  | Recommended value | Goes with (depends on) parameters                                 | Value type |
|---------------|----------------|-------------------|---|------------|
| Empty         | 16 char string | -                 | <b>GPRS Enable (ID=240)</b><br><b>Server port number (ID=246)</b> | S8[16]     |

##### Server port number (ID=246)

Parameter defines Avl data destination server port number. Example: 12050

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                | Value type |
|---------------|---------------|-------------------|--|------------|
| Empty         | 65535         | -                 | <b>GPRS Enable (ID=240)</b><br><b>Server IP address (ID=245)</b> | U16        |

### 8.5 Geofence zones settings and parameters

This chapter explains how to get all parameters for the first GeoFence zone (all ID numbers are for the 1<sup>st</sup> zone). And at the end of the chapter (part 1.6.7) is presented a table with the IDs of all the rest GeoFence zones.

GeoFence border width (ID=020)

GeoFence border thickness, measured in meters.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                        | Value type |
|---------------|---------------|-------------------|--|------------|
| 100           | 9999999       | 1000              | <b>GeoFence Zone #1 Configuration Parameter (ID=030)</b> | U32        |

GeoFence Zone #1 Configuration Parameter (ID=030)

GeoFence Zone #1 Configuration is 1<sup>st</sup> zone basic settings parameter: GeoFence zone shape, priority, zone entering event, zone-leaving event. There are two GeoFence zone shapes: circle, rectangle. GeoFence Zone priority has eight levels (0 to 7). Parameter value is four bytes that have bit encoded values.

0 bit – GeoFence zone shape

1-3 bits – GeoFence event priority

4 bit – Zone entering event

5 bit – Zone leaving event

6-31 bits reserved

#### Example:

Value to set: 51 (integer) is [M]00110011[L], where GeoFence Zone shape is Rectangular, priority of 1, Zone entering event is enabled, Zone leaving event is enabled.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| 0             | -             | -                 | <b>GeoFence border width (ID=020)</b><br><b>GeoFence x1 (ID=031)</b><br><b>GeoFence y1 (ID=032)</b><br><b>GeoFence x2 (ID=033)</b><br><b>GeoFence y2 (ID=034)</b> | U32        |

GeoFence x1 (ID=031)

Parameter has two meanings dependent on zone shape. If shape is rectangular, then ID=031 is left down corner X coordinate in WGS. If shape is circle, then ID=031 is center of that circle X coordinate in WGS.

Sample value: 25.30528

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| -180.0        | 180.0         | -                 | <b>GeoFence border width (ID=020)</b><br><b>GeoFence Zone #1 Configuration Parameter (ID=030)</b> | Float      |

GeoFence y1 (ID=032)

Parameter has two meanings dependent on zone shape. If shape is rectangular, then ID=032 is left down corner Y coordinate in WGS. If shape is circle, then ID=032 is center of that circle Y coordinate in WGS.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| -90.0         | 90.0          | -                 | <b>GeoFence border width (ID=020)</b><br><b>GeoFence Zone #1 Configuration Parameter (ID=030)</b> | Float      |

#### GeoFence x2 (ID=033)

Parameter has two meanings dependent on zone shape. If shape is rectangular, then ID=033 is right upper corner X coordinate in WGS. If shape is circle, then ID=033 is radius of circle with center of ID=031 and ID=032.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| -180.0        | 180.0         | -                 | <b>GeoFence border width (ID=020)</b><br><b>GeoFence Zone #1 Configuration Parameter (ID=030)</b> | Float      |

#### GeoFence y2 (ID=034)

If shape is rectangular, then ID=034 is right upper corner Y coordinate in WGS. If shape circle, ID=034 is not used.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| -90.0         | 90.0          | -                 | <b>GeoFence border width (ID=020)</b><br><b>GeoFence Zone #1 Configuration Parameter (ID=030)</b> | Float      |

#### All the rest zones

Other 5 GeoFence zones parameters have the same logic as shown in GeoFence Zone #1.

| GeoFence Zone Number | GeoFence Zone's parameters |
|----------------------|----------------------------|
| 2                    | 040 – 044                  |
| 3                    | 050 – 054                  |
| 4                    | 060 – 064                  |
| 5                    | 070 – 074                  |

## 8.6 System parameters

#### Sleep mode (ID=000)

Parameter enables or disables sleep mode for FM2200: 0 – disabled, 1 – enabled.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | -                 | -                                 | Enum       |

#### GPS Enable (ID=010)

Parameter enables or disables GPS receiver. When GPS is disabled value is 0, and 1 when enabled.



| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|--|------------|
| 0             | 1             | -                 | <b>Time based acquire interval (ID=011)</b><br><b>Distance based acquire interval (ID=012)</b><br><b>Angle based coordinate acquisition (ID=013)</b> | S8         |

### 8.7 IO properties

IO properties – are additional data sources which are recorded along with usual GPS data.

IO#1 property parameter (ID=300)

Parameter defines IO property value. Possible values: enabled (value 1), disabled (value 0).

|          |         |
|----------|---------|
| 0        | 1       |
| Disabled | Enabled |

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| 0             | byte          | -                 | <b>IO#1 priority (ID=301)</b><br><b>IO#1 High level (ID=302)</b><br><b>IO#1 Low level (ID=303)</b><br><b>IO#1 logic operand (ID=304)</b><br><b>IO#1 averaging length (ID=305)</b> | S8         |

IO#1 priority (ID=301)

Parameter defines IO property type of priority: 0 is low, 1 – high, 2 – panic priority type.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| 0             | 2             | 0                 | <b>IO#1 property parameter (ID=300)</b><br><b>IO#1 High level (ID=302)</b><br><b>IO#1 Low level (ID=303)</b><br><b>IO#1 logic operand (ID=304)</b><br><b>IO#1 averaging length (ID=305)</b> | S8         |

IO#1 High level (ID=302)

Parameter defines high value of triggered IO property. This parameter is used to set thresholds for IO properties to generate events.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| -2147483648   | 2147483648    | 1                 | <b>IO#1 property parameter (ID=300)</b><br><b>IO#1 priority (ID=301)</b><br><b>IO#1 Low level (ID=303)</b><br><b>IO#1 logic operand (ID=304)</b><br><b>IO#1 averaging length (ID=305)</b> | S32        |

IO#1 Low level (ID=303)

Parameter defines low value of triggered IO property. This parameter is used to set thresholds for IO properties to generate events.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|--|------------|
| -2147483648   | 2147483648    | 0                 | <b>IO#1 property parameter (ID=300)</b><br><b>IO#1 priority (ID=301)</b><br><b>IO#1 High level (ID=302)</b><br><b>IO#1 logic operand (ID=304)</b><br><b>IO#1 averaging length (ID=305)</b> | S32        |

#### IO#1 logic operand (ID=304)

Parameter defines when event is sent: 0: on range exit, 1: on range entrance, 2: both, 3: monitoring.

| Minimal value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|--|------------|
| 0             | 3             | 3                 | <b>IO#1 property parameter (ID=300)</b><br><b>IO#1 priority (ID=301)</b><br><b>IO#1 High level (ID=302)</b><br><b>IO#1 Low level (ID=303)</b><br><b>IO#1 averaging length (ID=305)</b> | S8         |

#### IO#1 averaging length (ID=305)

Parameter defines IO property sample length to average. If no averaging needed default value is 1.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters   | Value type |
|---------------|---------------|-------------------|---|------------|
| 0             | 2147483648    | 1                 | <b>IO#1 property parameter (ID=300)</b><br><b>IO#1 priority (ID=301)</b><br><b>IO#1 High level (ID=302)</b><br><b>IO#1 Low level (ID=303)</b><br><b>IO#1 logic operand (ID=304)</b> | S32        |

Other IO property elements are configuring in same logic. All IO elements parameter list is below.

| IO Element Number             | IO element parameters |
|-------------------------------|-----------------------|
| IO#0 – Digital input 1        | 300 – 305             |
| IO#1 – Digital input 2        | 310 – 315             |
| IO#2 – Digital output 1       | 320 – 325             |
| IO#3 – Digital output 2       | 330 – 335             |
| IO#4 – PDOP                   | 340 – 345             |
| IO#5 – HDOP                   | 350 – 355             |
| IO#6 – Power voltage          | 360 – 365             |
| IO#7 – GPS power              | 370 – 375             |
| IO#8 – PCB temperature        | 380 – 385             |
| IO#9 – Movement sensor        | 390 – 395             |
| IO#10 – Odometer              | 400 – 405             |
| IO#11 – Current Operator Code | 410 – 415             |
| IO#12 – Speedometer           | 420 – 425             |
| IO#13 – GSM Signal Level      | 430 – 435             |

## 9 MOUNTING RECOMMENDATIONS

### 9.1 *Connecting Wires*

- Wires should be connected while module is not plugged in.
- Wires should be fastened to the other wires or non-moving parts. Try to avoid heat emitting and moving objects near the wires.
- The connections should not be seen very clearly. If factory isolation was removed while connecting wires, it should be applied again.
- If the wires are placed in the exterior or in places where they can be damaged or exposed to heat, humidity, dirt, etc., additional isolation should be applied.
- Wires cannot be connected to the board computers or control units.

### 9.2 *Connecting Power Source*

- Be sure that after the car computer falls asleep, power is still available on chosen wire. Depending on a car, this may happen in 5 to 30 minutes period.
- When module is connected, be sure to measure voltage again if it did not decrease.
- It is recommended to connect to the main power cable in the fuse box.

### 9.3 *Connecting Ignition Wire*

- Be sure to check if it is a real ignition wire – power does not disappear while starting the engine.
- Check if this is not an ACC wire (when key is in the first position, most electronics of the vehicle are available).
- Check if power is still available when you turn off any of vehicles devices.
- Ignition is connected to the ignition relay output. As alternative, any other relay, which has power output, when ignition is on, may be chosen.

### 9.4 *Connecting Ground Wire*

- Ground wire is connected to the vehicle frame or metal parts that are fixed to the frame.
- If the wire is fixed with the bolt, the loop must be connected to the end of the wire.
- For better contact scrub paint from the place where loop is connected.

### 9.5 *Connecting Antennas*

- When placing antennas avoid easily reached places.
- Avoid GPS antenna placement under metal surfaces.
- Avoid placing FM2200 device near car radio, speakers or alarm systems.
- GPS antenna must be placed so its state is as horizontal as possible (if antenna is leant more than 30 degrees, it is considered incorrect mounting).
- GPS antenna cable cannot be bent more than 80 degrees.
- GPS antenna must be placed sticker facing down



Figure 27 GPS antenna correct mounting.

It is recommended to place GPS antenna behind dashboard as close to the window as possible. A good example of GPS antenna placement is displayed in a picture below (area colored green).

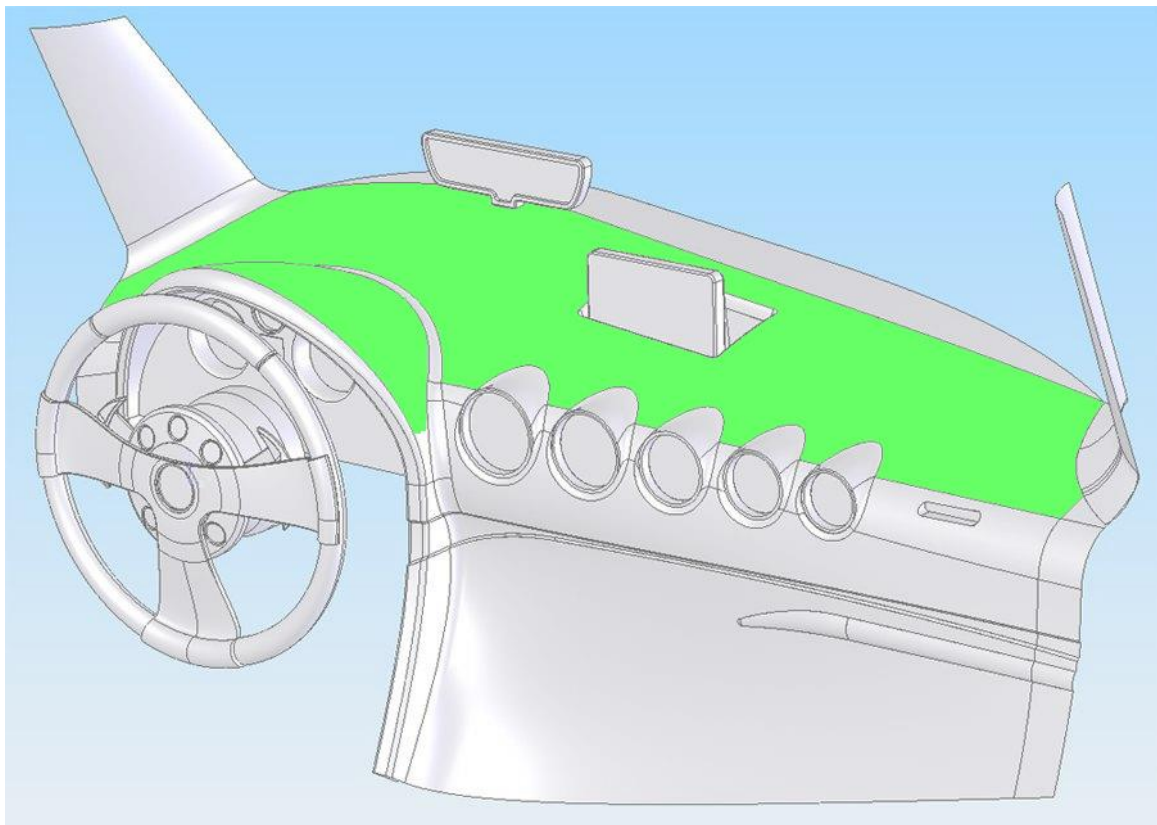


Figure 28. Correct placement of FM2200

### 9.6 *Module Installation*

- Module should not be seen or easily reached.
- Module should be firmly fixed to the surface or cables.
- Module cannot be fixed to heat emitting or moving parts.
- SIM card should be inserted in the module while the connector is plugged off (while module has no power).

## 10 CHANGE LOG

| Nr. | Date   | Version | Comments  |
|-----|--------|---------|---|
| 1   | 090109 | 0.1     | Preliminary draft release.  |
| 2   | 090114 | 0.2     | Minor changes   |
| 3   | 090224 | 0.3     | Minor changes to GSM module   |
| 4   | 090403 | 0.4     | Formatting correction.  |
| 5   | 090610 | 0.5     | Changes to IO list  |
| 6   | 090619 | 0.6     | Sleep Mode current consumption and TM1 band description corrected. Panic button connection diagram modified.      |
| 7   | 090713 | 0.7     | New firmware update method added. Parameter list updated. SMS command "flush" updated. Major formatting revision. |
| 8   | 090715 | 0.8     | Pinout description fixed.   |
| 9   | 090727 | 0.9     | Navigation LED description corrected.   |
| 10  | 090827 | 0.10    | Min. distance data calculation algorithm description corrected. Formatting revision.                              |
| 11  | 091105 | 1.1     | Major revision of engineering version 0.10. Initial release   |
| 12  | 091116 | 1.2     | FM2200 view & dimensions figure added.  |
| 13  | 100211 | 1.3     | New Skytraq GPS module details added.   |
| 14  | 100402 | 1.4     | Movement sensor's Start move timeout parameter's description added.   |
| 15  | 100721 | 1.5     | Paragraph "8.7 IO parameters" formatting fixed.   |
| 16  | 110628 | 1.6     | I/O numbers corrected   |
| 17  | 111213 | 1.7     | Minor download update   |
| 18  | 131001 | 1.8     | Removed unused RILS system description.   |
| 19  | 140604 | 1.9     | Change pic. Immobilizer relay connection  |